WF8804FS(A/F/G/H/S/V/W/Z)
WF8802FS(A/F/G/H/S/V/W/Z)
WF8800FS(A/F/G/H/S/V/W/Z)
WF8704FS(A/F/G/H/S/V/W/Z)
WF8702FS(A/F/G/H/S/V/W/Z)
WF8700FS(A/F/G/H/S/V/W/Z)
WF8804AS(A/F/G/H/S/V/W/Z)
WF8802AS(A/F/G/H/S/V/W/Z)
WF8800AS(A/F/G/H/S/V/W/Z)
WF8704AS(A/F/G/H/S/V/W/Z)
WF8702AS(A/F/G/H/S/V/W/Z)
WF8700AS(A/F/G/H/S/V/W/Z)
WF8804LS(A/F/G/H/S/V/W/Z)
WF8802LS(A/F/G/H/S/V/W/Z)
WF8800LS(A/F/G/H/S/V/W/Z)
WF8704LS(A/F/G/H/S/V/W/Z)
WF8702LS(A/F/G/H/S/V/W/Z)
WF8700LS(A/F/G/H/S/V/W/Z)

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register
your product at

www.samsung.com/global/register

SAMSUNG

WF8800LSS-02591L_EN.indd 1 2008-03-26 ¿ÀÈÄ 12:07:30

features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its super-size capacity to its energy efficiency, the Samsung washing machine has all the features to turn a mundane chore into a pleasure.

- **Baby Care System**

  Your Samsung washing machine includes wash programs that adds protection to the clothing of children with sensitive skin.
  These programs reduce skin irritation in children by minimizing detergent residue. In addition, these programs classify laundry into various types and the wash is performed according to the laundry characteristics so that children feel refreshingly clean whenever they put on their clothes.

- **Child Lock**

  The Child Lock function ensures that curious little hands are kept out of your washing machine.
  This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Wool Certified**

  The machine has been tested and passed the required Woolmark Company specification for machine washable wool products.
  Fabrics should be washed according to the instructions on the garment label as specified by Woolmark and Samsung.

- **Delay End**

  Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Quick Wash**

  No time to lose! Less than 30 minutes wash will give you time to run out before it's too late. Our 29 minute Quick Wash program can be the solution to your busy life. Now you can wash your favourite clothes in only 29 minutes!

- **Delicates & Hand Wash Program**

  Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

- **Ceramic Heater for Durability & Energy Saving (selected models)**

  Our truly innovative Ceramic Heater is twice as durable as regular heaters.
  That saves you money on repairs. Plus, it eliminates the scale of hard water and save energy.

WF8800LSS-02591L_EN.indd 2 2008-03-26 ¿ÀÈÄ 12:07:30

- **Energy Saving A+AA**

  We've made the grade! Samsung's WF8804(AS/LS/FS)/WF8704(AS/LS/FS), the latest in our hightech 1400 rpm spin models, was awarded a triple A score: A+ rated energy consumption, A rated washing performance, and A rated spin dry performance. As a result, you accumulate more free time and money to spend on what really counts - you and your family.

- **Wide door**

  Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 29 tells you what to do if something goes wrong with your new washing machine.

WF8800LSS-02591L_EN.indd 3 2008-03-26 ¿ÀÈÄ 12:07:30

safety information

Throughout this manual, you'll see Warning ⚠ and Caution ⚠ notes. These warnings, cautions, and the important safety instructions that follow do not cover all possible conditions and situations that may occur. It's your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washing machine. Samsung is not liable for damages resulting from improper use.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

⚠ **WARNING**	Hazards or unsafe practices that may result in **severe personal injury or death**.
⚠ **CAUTION**	Hazards or unsafe practices that may result in **minor personal injury or property damage**.
⚠ **CAUTION**	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washing machine, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
	Notice

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

Install and store your washing machine inside, away from exposure to weather.

Install and level your washing machine on a floor that can support its weight.

Your washing machine must be properly grounded. Never plug it into an ungrounded outlet.

WF8800LSS-02591L_EN.indd 4 2008-03-26 ¿ÀÈÄ 12:07:36

To reduce the risk of fire or explosion:

- Do not wash items that have been washed, soaked, or treated with gasoline, dry cleaning solvents, or other flammable or explosive substances. They give off vapors that could ignite or explode. Rinse by hand any material that has been exposed to cleaning solvent or other flammable liquids or solids before putting in your washing machine. Be sure that all traces of such liquids, solids, and fumes have been removed. Dangerous substances include acetone, denatured alcohol, gasoline, kerosene, certain liquid household cleaners and spot removers, turpentine, waxes, and wax removers.
- Do not put gasoline, dry cleaning solvents, or other flammable or explosive substances into the washing machine.
- Under certain conditions, hydrogen gas may be produced in a hot water system–such as your hot water heater -- that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water taps in your home, and let the water flow for several minutes before using your washing machine. This will release any hydrogen gas build–up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time.

Ventilate immediately without touching the power plug if there is a gas leak.

Unplug the power cord before servicing your washing machine.

Before each wash, empty the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal metal.

Do not open the door of the washing machine if you can still see water. Check that the water has drained before opening the door.

Do not repair, replace, or service any part of your washing machine yourself unless you fully understand the recommended user–repair instructions and have the skills to carry them out. Work done by an unauthorized person may void your warranty.

Connect the washing machine to the water mains using the new set of hoses. Do not reuse the old set of hoses.

Water inlet hoses deteriorate over time. Check the hoses periodically for bulges, kinks, cuts, wear, and leaks, and replace them as needed and at least every five years.

Packing materials can be dangerous to children; keep all packing material (plastic bags, polystyrene, etc.) well out of the reach of children.

All packaging and shipping bolts must be removed before the appliance is used. Serious damage may occur if they are not removed. See “Removing the shipping bolts”.

Before washing clothes for the first time, you must run a complete cycle without clothes. See “Washing for the first time”.

WF8800LSS-02591L_EN.indd 5 2008-03-26 ¿ÀÈÄ 12:07:37

safety information

The appliance is designed for home use only.

WARNING Make sure that water and electrical connections are made by qualified technicians, observing the manufacturer's instructions (see "Installing the Washing Machine") and local safety regulations.

Before cleaning or carrying out maintenance, unplug the appliance from the electrical outlet.

Always unplug the appliance and turn off the water after use.

Make sure that the pockets of all clothing to be washed are empty.

Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Never allow pets and children to play on or in the appliance. It may cause injury or suffocate them.

The glass door becomes very hot during the washing cycle. Never touch on the glass door while it is in use.

Do not attempt to repair the appliance yourself. Repairs made by inexperienced or unqualified persons may cause injury and/or make more serious repairs to the appliance necessary.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should only be serviced by our authorized service center, and only rated spare parts should be used.

WARNING Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.

This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

Young children should be supervised to ensure that they do not play with the appliance.

To use this appliance safely, the user should become familiar with the instructions for operation of the appliance and always take extra care when using it.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

Do not use processed water containing oil, cream or lotion, which is usually found in skincare shops or massage clinics.

- Otherwise this will cause the packing to be deformed, which causes a malfunction or water leak.

WF8800LSS-02591L_EN.indd 6 2008-03-26 ¿ÀÈÄ 12:07:37

A stainless washing tub does not usually rust. However if some metal such as a hair pin is left in the tub for an extended time, the tub could rust.

- Do not leave water or bleach containing chlorine in the tub for an extended period of time.
- Do not regularly use or leave water containing iron in the tub for an extended period of time. If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge or soft cloth to clean it. (Under no circumstances use a metal brush)

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

WF8800LSS-02591L_EN.indd 7 2008-03-26 ¿ÀÈÄ 12:07:37

contents

SETTING UP YOUR WASHING MACHINE 9

9 Checking the parts
10 Meeting installation requirements
10 Electrical supply and grounding
10 Water Supply
11 Drain
11 Flooring
11 Surrounding temperature
11 Alcove or closet installation
11 Installing your washing machine

WASHING A LOAD OF LAUNDRY 17

17 Washing for the first time
17 Basic instructions
18 Using the control panel
20 Child lock
20 Sound off
20 Delay end
21 Washing clothes using the cycle selector
22 Washing clothes manually
22 Laundry guidelines
24 Detergent and additives information
24 Which detergent to use
24 Detergent drawer

CLEANING AND MAINTAINING YOUR WASHING MACHINE 25

25 Draining the washing machine in an emergency
25 Cleaning the exterior
26 Cleaning the detergent drawer and drawer recess
27 Cleaning the debris filter
27 Cleaning the water hose mesh filter
28 Repairing a frozen washing machine
28 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES 29

29 Check these points if your washing machine...
30 Information codes

CYCLE CHART 31

31 Cycle chart

APPENDIX 32

32 Fabric care chart
32 Protecting the environment
32 Declaration of conformity
33 Specifications

WF8800LSS-02591L_EN.indd 8 2008-03-26 ¿ÀÈÄ 12:07:37

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

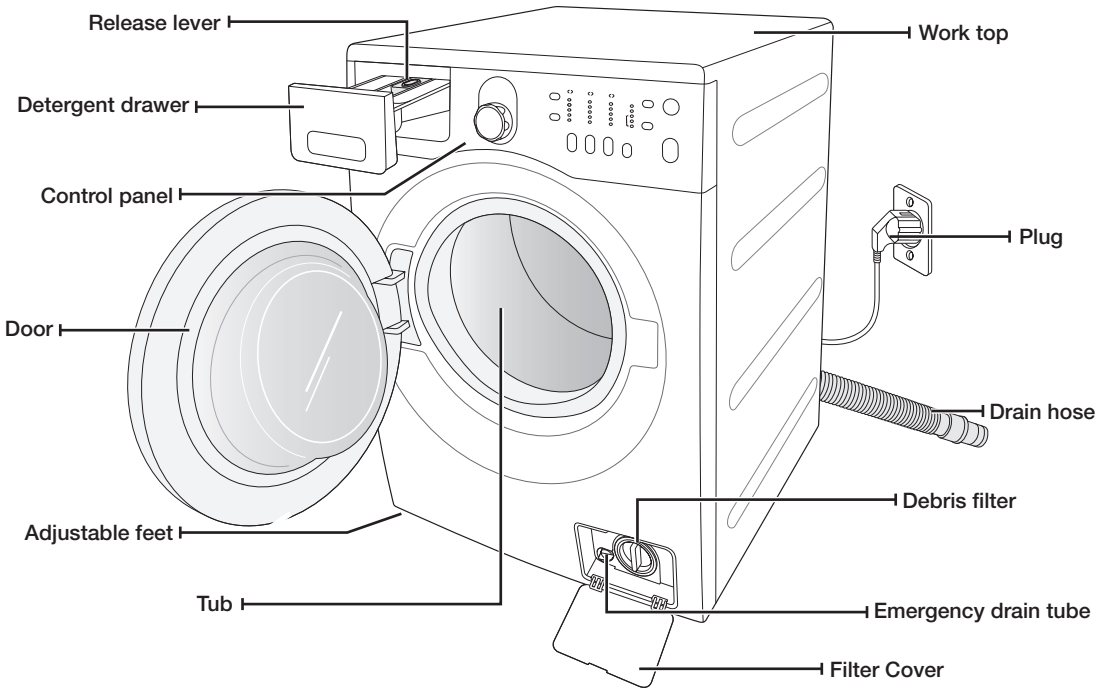



Spanner

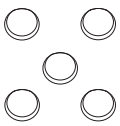

Bolt hole covers

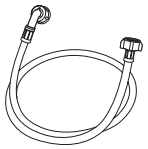

Water supply hose



Hose guide

WF8800LSS-02591L_EN.indd 9 2008-03-26 ¿ÀÈÄ 12:07:40

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.

Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:
- 220V~240V 50Hz 15 AMP fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock.
Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 4 feet (122cm) of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 10 feet (305cm) long.

You can reduce the risk of leaks and water damage by:
- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WF8800LSS-02591L_EN.indd 10 2008-03-26 ¿ÀÈÄ 12:07:41

Drain

Samsung recommends a standpipe height of 18 in (46 cm). The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components. You should always use your washing machine when the surrounding temperature is at least 60°F(16°C).

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm (1 in)	Rear – 51 mm (2 in)
Top – 25 mm (1 in)	Front – 465 sq.cm (72 sq.in.)

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 72 sq. in. (465 sq. cm) unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1
Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 32 ˚F or 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WF8800LSS-02591L_EN.indd 11 2008-03-26 ¿ÀÈÄ 12:07:41

setting up your washing machine

STEP 2
Removing the shipping bolts

Before installing the washing machine, you must remove the five shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

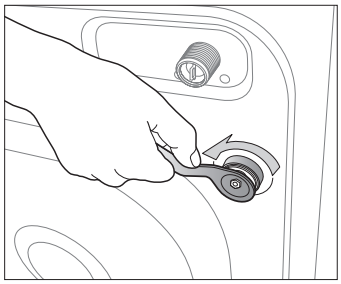

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

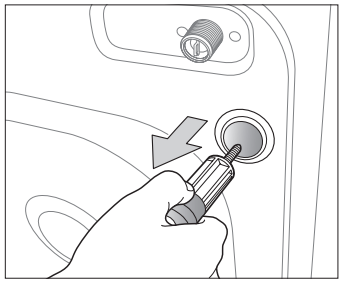

3. Fill the holes with the supplied plastic covers.

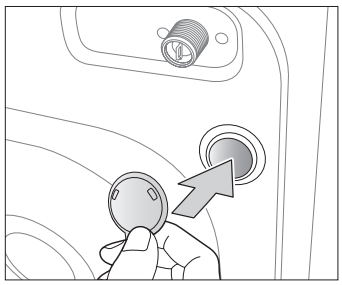

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

WF8800LSS-02591L_EN.indd 12 2008-03-26 ¿ÀÈÄ 12:07:43

STEP 3
Adjusting the levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washing machine by turning the leveling feet in and out as necessary by hand.

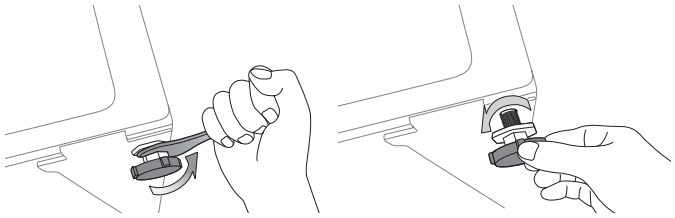

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

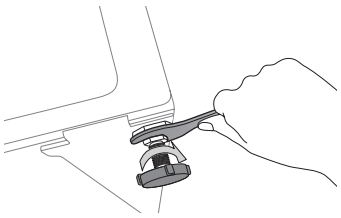

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

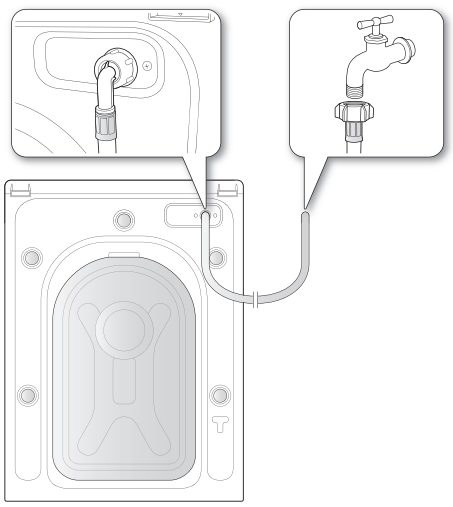

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WF8800LSS-02591L_EN.indd 13 2008-03-26 ¿ÀÈÄ 12:07:45

setting up your washing machine

Connecting the water supply hose (selected models)

1. Remove the adaptor from the water supply hose.

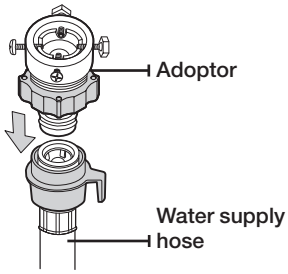

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

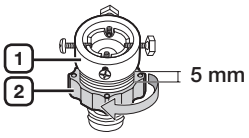

3. Connect the adaptor to the water tap by tightening the screws firmly. Turn part (2) following the arrow and connect (1) and (2).

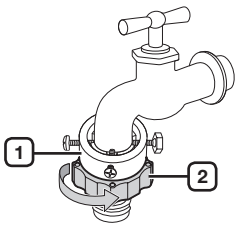

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

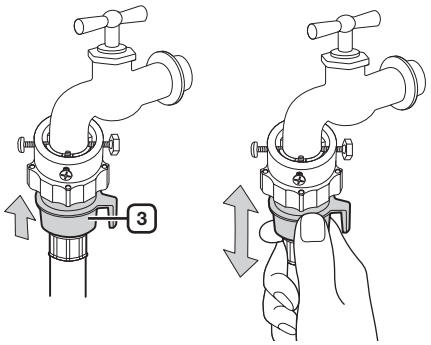

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

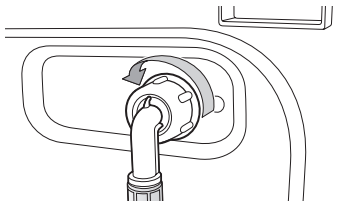

WF8800LSS-02591L_EN.indd 14 2008-03-26 ¿ÀÈÄ 12:07:48

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

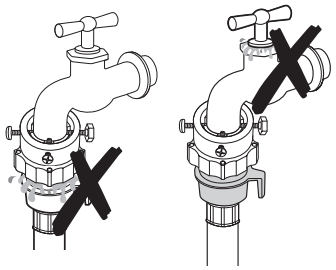

WARNING Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

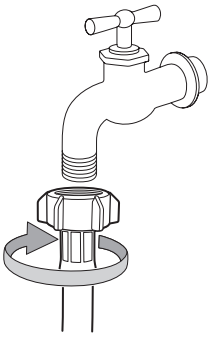

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

WF8800LSS-02591L_EN.indd 15 2008-03-26 ¿ÀÈÄ 12:07:50

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

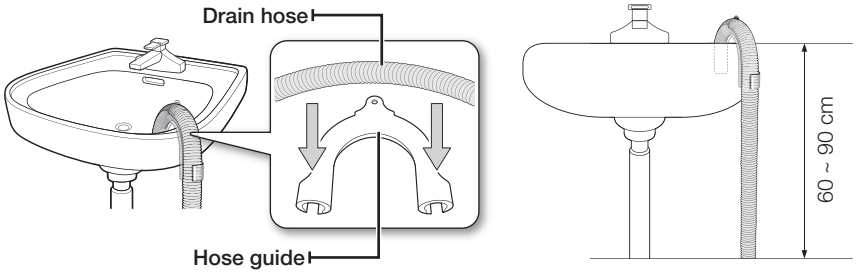

2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

STEP 5

Powering your washing machine

Plug the power cord into a wall sockets, a 230 volt 50 Hz approved electrical outlet protected by a 15-amp fuse or comparable circuit breaker. (For more information on electrical and grounding requirements, see page 10.)

WF8800LSS-02591L_EN.indd 16 2008-03-26 ¿ÀÈÄ 12:07:52

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

This will remove any water that might be left over in the machine from the manufacturer's test run.

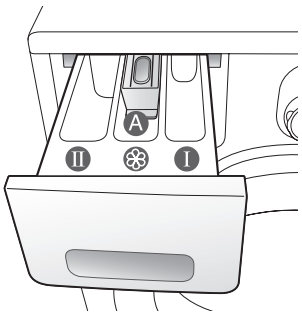

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.
Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 24.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not wash water-proofed items.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

WF8800LSS-02591L_EN.indd 17 2008-03-26 ¿ÀÈÄ 12:08:01

washing a load of laundry

USING THE CONTROL PANEL

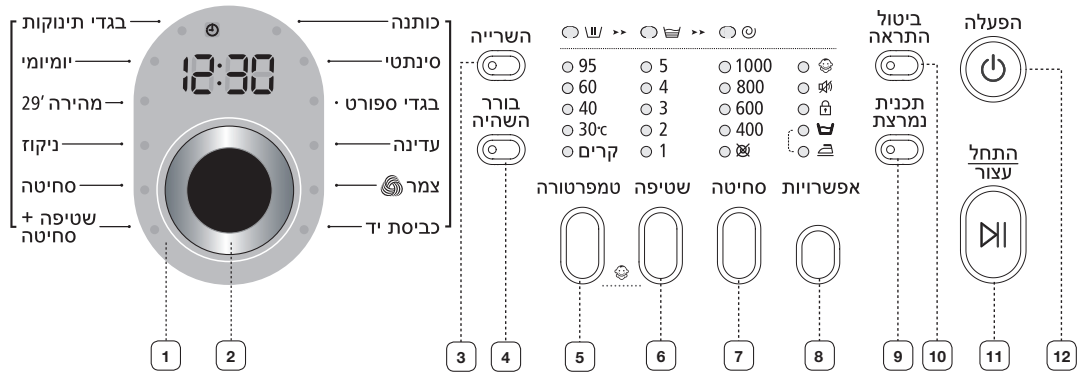

1 **DIGITAL GRAPHIC DISPLAY**	Displays the remaining wash cycle time, all cycle information, and error messages.
2 **CYCLE SELECTOR**	Select the tumble pattern and spin speed for the cycle. For detailed information, refer to “Washing clothes using the cycle selector”. **Cotton** - For averagely or lightly soiled cotton, bed linen, table linen, underwear, towels, shirts, etc. **Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. **Sports Wear** - Use for water-proofed or proofed garments to keep their good looks and fresh feel. **Delicates** - For sheer fabrics, brassieres, lingerie, dresses, shirts and blouses. For best results, use liquid detergent. **Wool** - Only for machine-washable wool. A load should be less than 2.0 kg. The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M0509 (Certificate Number issued by IWS NOM INEE Co., Ltd.) **Handwash** - A very light wash cycle as gentle as a hand wash. **Baby Care** - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes. **Daily Wash** - Use for everyday items such as underwear and shirts. **Quick 29’** - For lightly soiled garments that you require quickly. **Drain** - Just drain the water from washing machine without spinning. **Spin** - Performs an additional spin cycle to remove more water. **Rinse + Spin** - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load.

WF8800LSS-02591L_EN.indd 18 2008-03-26 ¿ÀÈÄ 12:08:02

3 **PREWASH SELECTION BUTTON**	Press this button to select pre-wash. Pre-wash is only available with: Cotton, Synthetics, Sports Wear, Baby Care, Daily Wash.
4 **DELAY END SELECTION BUTTON**	Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.
5 **TEMPERATURE SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (Cold Water, 30 ˚C, 40 ˚C , 60 ˚C and 95 ˚C).
6 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
7 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. WF8804 / WF8704 — , , 400, 800, 1200, 1400 rpm WF8802 / WF8702 — , , 400, 800, 1000, 1200 rpm WF8800 / WF8700 — , , 400, 600, 800, 1000 rpm "No spin " - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold " -The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.
8 **WASH OPTION SELECTION BUTTON**	Press this button repeatedly to cycle through the wash options: Easy Iron → Soak → Easy Iron + Soak → off "Easy Iron": Use this option to prepare your laundry so that it can be easily ironed. "Soak": Use this option to effectively remove stains from your laundry by soaking your laundry. • The Soak function is performed 13 minutes into the wash cycle. • The Soak function continues for 30 minutes with six cycles, where one cycle is a soak cycle that spins for 1 minute and stands still for 4 minutes. • The Soak function is only available for the following wash programs: Cotton, Synthetics, Sports wear, Baby care, Daily wash.
9 **INTENSIVE WASH SELECTION BUTTON**	Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle.
10 **SOUND OFF BUTTON**	The sound can be turned off for all courses. When this function is selected, the sound is turned off for all cycles. • When the Sound off function is activated, the lamp on the **Sound Off** button and the control panel are illuminated. • When the Sound off function is deactivated, a buzzer will go off, and the lamp on the button and the control panel is turned off.
11 **START/PAUSE SELECTION BUTTON**	Press to pause and restart a cycle.
12 **POWER BUTTON**	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WF8800LSS-02591L_EN.indd 19 2008-03-26 ¿ÀÈÄ 12:08:06

washing a load of laundry

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. The "Child Lock" lamp on the control panel will be lit when this feature is activated.

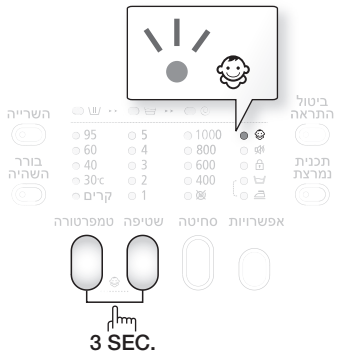

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Sound OFF** button. The lamp on the **Sound Off** button and the control panel will be lit when this feature is activated.

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay End" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

WF8800LSS-02591L_EN.indd 20 2008-03-26 ¿ÀÈÄ 12:08:09

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the Cotton, Synthetics, Sports Wear, Baby Care, and Daily Wash cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Sports Wear, Delicates, Wool, Hand Wash, Baby Care, Daily Wash, Quick 29'. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.

The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

WF8800LSS-02591L_EN.indd 21 2008-03-26 ¿ÀÈÄ 12:08:11

washing a load of laundry

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature. (Cold water, 30 ˚C, 40 ˚C, 60 ˚C, 95 ˚C)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.
   The rinse hold function allows you to remove items that are still wet from the washing machine. (: No Spin, : Rinse Hold)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.
Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.
Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

WF8800LSS-02591L_EN.indd 22 2008-03-26 ¿ÀÈÄ 12:08:11

Determining the load capacity

Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity	
Model	WF8804/ WF8802/ WF8800	WF8704/ WF8702/ WF8700/
Cotton - average/lightly soiled - heavily soiled	8.0 kg	7.0 kg
Synthetics	3.0 kg	3.0 kg
Sports Wear	2.5 kg	2.5 kg
Delicates	2.5 kg	2.5 kg
Wool	2.0 kg	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvets, the wash time may be lengthened or the spin efficiency may be degraded.
- For Bedding or Duvets, the recommended load capacity is 1.8(kg) or less.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

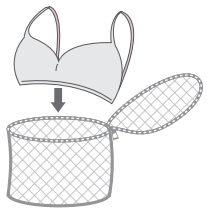

WF8800LSS-02591L_EN.indd 23 2008-03-26 ¿ÀÈÄ 12:08:12

washing a load of laundry

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use “low suds” laundry detergent, which is designed for automatic washing machines.
Follow the detergent manufacturer’s recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do NOT open the detergent drawer when your washing machine is running.

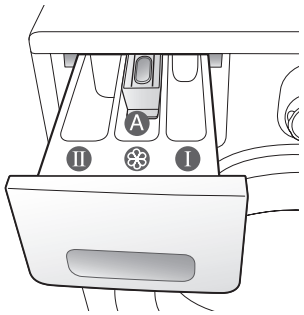

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.
3. Add the recommended amount of fabric softener into the softener compartment ❀ if required.
4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⅰ.

When washing large items do NOT use the following detergent types.

- Tablet and capsule type detergents
- Detergents using a ball and net

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked.)

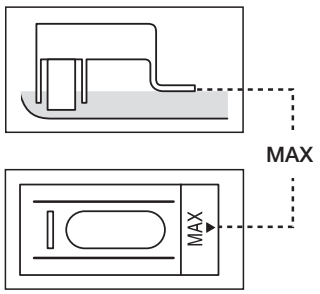

WF8800LSS-02591L_EN.indd 24 2008-03-26 ¿ÀÈÄ 12:08:13

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover using a coin or a key.

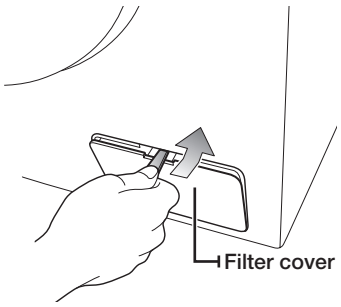

3. Unscrew the emergency drain cap by turning it to the left.

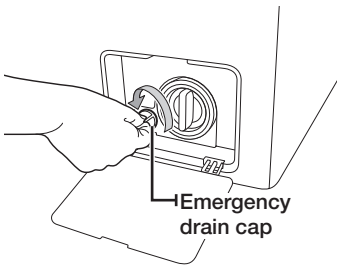

4. Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
5. Allow all the water to flow into a bowl.
6. Reinsert the drain tube and screw the cap back on.
7. Replace the filter-cover.

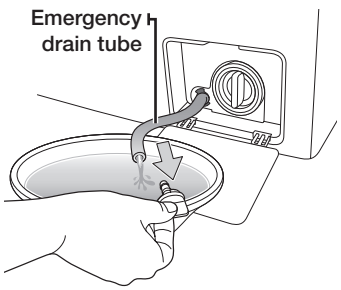

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

WF8800LSS-02591L_EN.indd 25 2008-03-26 ¿ÀÈÄ 12:08:15

cleaning and maintaining your washing machine

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the liquid detergent divider from the detergent drawer

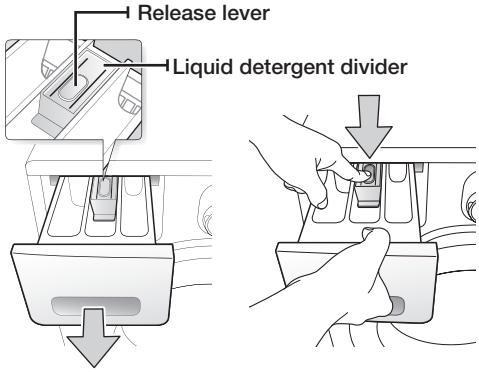

3. Wash all parts under running water.

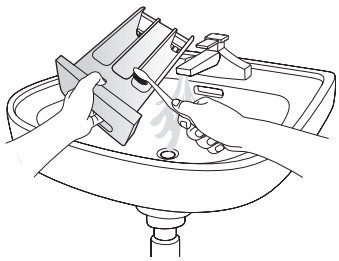

4. Clean the drawer recess with an old toothbrush.
5. Replace the liquid detergent divider by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

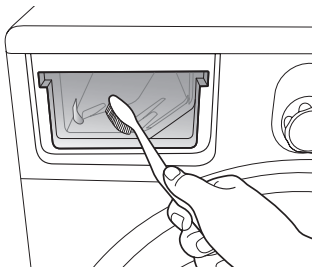

WF8800LSS-02591L_EN.indd 26 2008-03-26 ¿ÀÈÄ 12:08:17

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous page.)

1. Open the filter cover by using a key or coin.
2. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
3. Unscrew the debris filter cap.

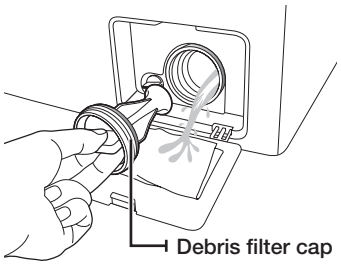

4. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
5. Replace the debris filter cap.
6. Replace the filter cover.

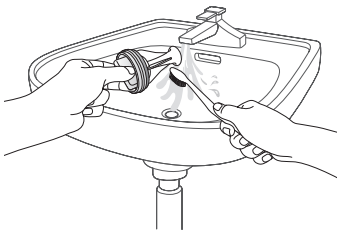

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of "4E" is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

WF8800LSS-02591L_EN.indd 27 2008-03-26 ¿ÀÈÄ 12:08:19

cleaning and maintaining your washing machine

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the Quick 29' cycle and add bleach to the bleach compartment. Run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.

If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

WF8800LSS-02591L_EN.indd 28 2008-03-26 ¿ÀÈÄ 12:08:19

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remains in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

WF8800LSS-02591L_EN.indd 29 2008-03-26 ¿ÀÈÄ 12:08:19

troubleshooting and information codes

INFORMATION CODES

When your washing machine malfunctions, you may see an information code on the display. If that happens, check this table and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Close the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
cE/3E	• Call the after-sales service.

For any codes not listed above, or if the suggested solution doesn’t fix the problem, call your Samsung Service Centre or local Samsung dealer.

WF8800LSS-02591L_EN.indd 30 2008-03-26 ¿ÀÈÄ 12:08:19

cycle chart

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)		DETERGENT			Max Temp (˚C)
	WF8804/ WF8802/ WF8800	WF8704/ WF8702/ WF8700	Pre-wash	wash	Softener	
Cotton	8.0	7.0	●	yes	●	95
Synthetics	3.0	3.0	●	yes	●	60
Sports Wear	2.5	2.5	●	yes	●	60
Delicates	2.5	2.5	-	yes	-	40
Wool	2.0	2.0	-	yes	-	40
Handwash	2.0	2.0	-	yes	●	40
Baby Care	4.0	3.0	●	yes	●	95
Daily Wash	4.0	3.0	●	yes	●	60
Quick 29’	3.0	3.0	-	yes	●	60

PROGRAM	Spin Speed(MAX) rpm			Delay end	Cycle time (min)
	WF8804/ WF8704	WF8802/ WF8702	WF8800/ WF8700		
Cotton	1400	1200	1000	●	120
Synthetics	1200	1200	1000	●	84
Sports Wear	1200	1200	1000	●	65
Delicates	800	800	800	●	45
Wool	800	800	800	●	37
Handwash	400	400	400	●	30
Baby Care	1400	1200	1000	●	129
Daily Wash	1200	1200	1000	●	65
Quick 29’	1400	1200	1000	●	29

1. A cycle with a prewash takes approx. 15 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
4. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

WF8800LSS-02591L_EN.indd 31 2008-03-26 ¿ÀÈÄ 12:08:19

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing, and dry cleaning when necessary.
The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundering problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
	Item may be washed at 95 ˚C		Can be dry cleaned using any solvent
	Item may be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

WF8800LSS-02591L_EN.indd 32 2008-03-26 ¿ÀÈÄ 12:08:28

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE					
DIMENSIONS			WF8804AS/WF8804LS/WF8804FS WF8802AS/WF8802LS/WF8802FS WF8800AS/WF8800LS/WF8800FS			WF8704AS/WF8704LS/WF8704FS WF8702AS/WF8702LS/WF8702FS WF8700AS/WF8700LS/WF8700FS		
			W598mm X D600mm X H844mm			W598mm X D600mm X H844mm		
WATER PRESSURE			50 kPa ~ 800 kPa					
WATER VOLUME			64 ℓ			56 ℓ		
NET WEIGHT			WF8804AS/ WF8804LS/ WF8804FS	WF8802AS/ WF8802LS/ WF8802FS	WF8800AS/ WF8800LS/ WF8800FS	WF8704AS/ WF8704LS/ WF8704FS	WF8702AS/ WF8702LS/ WF8702FS	WF8700AS/ WF8700LS/ WF8700FS
			74 kg	73 kg	72 kg	73 kg	72 kg	71 kg
WASH AND SPIN CAPACITY			8.0 kg			7.0 kg		
POWER CONSUMPTION	MODEL		WF8804AS/WF8804LS/WF8804FS WF8802AS/WF8802LS/WF8802FS WF8800AS/WF8800LS/WF8800FS			WF8704AS/WF8704LS/WF8704FS WF8702AS/WF8702LS/WF8702FS WF8700AS/WF8700LS/WF8700FS		
	WASHING		220 V	150 W		220 V	150 W	
			240 V	150 W		240 V	150 W	
	WASH AND HEATING		220 V	2000 W		220 V	2000 W	
			240 V	2400 W		240 V	2400 W	
	SPIN	MODEL	WF8804AS/ WF8804LS/ WF8804FS	WF8802AS/ WF8802LS/ WF8802FS	WF8800AS/ WF8800LS/ WF8800FS	WF8704AS/ WF8704LS/ WF8704FS	WF8702AS/ WF8702LS/ WF8702FS	WF8700AS/ WF8700LS/ WF8700FS
		230V	600 W	550 W	500 W	600 W	550 W	500 W
	PUMPING		34 W					
PACKAGE WEIGHT	MODEL		WF8804AS/WF8804LS/WF8804FS WF8802AS/WF8802LS/WF8802FS WF8800AS/WF8800LS/WF8800FS			WF8704AS/WF8704LS/WF8704FS WF8702AS/WF8702LS/WF8702FS WF8700AS/WF8700LS/WF8700FS		
	PAPER		2.5 kg					
	PLASTIC		1.0 kg					
SPIN REVOLUTIONS	MODEL		WF8804AS/WF8704AS WF8804LS/WF8704LS WF8804FS/WF8704FS		WF8802AS/WF8702AS WF8802LS/WF8702LS WF8802FS/WF8702FS		WF8800AS/WF8700AS WF8800LS/WF8700LS WF8800FS/WF8700FS	
	rpm		1400		1200		1000	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WF8800LSS-02591L_EN.indd 33 2008-03-26 ¿ÀÈÄ 12:08:29

memo

memo

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Code No. DC68-02591L_EN

WF8800LSS-02591L_EN.indd 36 2008-03-26 ¿ÀÈÄ 12:08:29

נתונים טכניים
מכונת כביסה פתח קדמי

כללי

מידות במ"מ: רוחב: 598 עומק: 600 גובה: 844
לחץ מים: **50kPa – 800kPa**
נפח מים: 56 ליטר
קיבולת כביסה מירבית: 8 ק"ג

צריכת חשמל

כביסה: **220-240V, 150W**
כביסה וחימום **220-240V, 2000W**
סיבוב **500W**
שאיבה: **34W**

סל"ד

דגם **WF8800**: **1000** סל"ד
דגם **WF8802** **1200** סל"ד

מידע נוסף

טבלת טיפול באריגים

הסמלים הבאים מספקים הוראות טיפול בבגדים. התוויות מכילות ארבעה סמלים בסדר הבא: כביסה, הלבנה, ייבוש וגיהוץ, וניקוי יבש בעת הצורך.
השימוש בסמלים מבטיח תאימות בין יצרני הבגדים המקומיים והמיובאים.
פעלו לפי ההוראות על התווית להארכת חיי הבגד ולהפחתת הבעיות בכביסה.

חומר עמיד		ניתן לגיהוץ ב- **100°C** מקסימום	
אריג עדין		אסור לגיהוץ	
ניתן לכביסה ב-**95°C**	95 95	ניתן לניקוי יבש עם כל ממיס	Ⓐ
ניתן לכביסה ב-**60°C**	60 60	ניקוי יבש עם פרכלוריד, גז מצתים, אלכוהול טהור או **R113** בלבד	Ⓟ
ניתן לכביסה ב-**40°C**	40 40	ניקוי יבש עם דלק תעופתי, אלכוהול טהור או **R113** בלבד	Ⓕ
ניתן לכביסה ב-**30°C**	30 30	אסור בניקוי יבש	
ניתן לכביסה ביד		ייבוש שטוח	
ניקוי יבש בלבד		ניתן לייבוש בתליה	
ניתן להלבנה במים קרים		ייבוש על קולב	
אסור להלבנה		ייבוש במייבש, חום רגיל	
ניתן לגיהוץ ב- **200°C** מקסימום		ייבוש במייבש, חום מופחת	
ניתן לגיהוץ ב- **150°C** מקסימום		אסור לייבוש במייבש	

הגנה על הסביבה

- מכשיר זה מיוצר מחומרים הניתנים למיחזור. אם אתם מחליטים להשליך אותו, נא פעלו לפי תקנת השלכת הפסולת המקומיות. חתכו את כבל המתח כך שלא ניתן יהיה לחבר את המכשיר למקור מתח. הסירו את הדלת כך שחיות וילדים קטנים לא יוכלו להינעל בתוך המכשיר.
- אל תחרגו מכמויות הדטרגנט המומלצות ע"י יצרן הדטרגנט.
- השתמשו במסירי כתמים ומלבינים לפני תהליך הכביסה, במקרה הצורך בלבד.
- חסכו מים וחשמל באמצעות כביסת כמויות מלאות בלבד (הכמות המדויקת תלויה בתכנית שבשימוש).

הצהרת תאימות

מוצר זה תואם לתקני הבטיחות האירופיים, הנחיית האיחוד האירופי 93/68 ותקן **EN** מס' 60335.

טבלת תכניות

(● ניתן לבחירה ע"י המשתמש)

תכנית	קיבולת מקסימלית (ק"ג) WF8800LSS WF8800LSV WF8802RPS WF8802RPV	דטרגנט			כביסת כסף	טמפרטורה מקסימלית (°C)
		כביסה מקדימה	כביסה	מרכך		
כותנה	8.0	●	כן	●	●	95
סינתטי	3.0	●	כן	●	●	60
אריג גס/סרבל	3.0	●	כן	●	●	60
בגדי ספורט	2.5	●	כן	●	●	60
עדינה	2.5	-	כן	-	-	40
צמר	2.0	-	כן	-	-	40
כביסת יד	2.0	-	כן	●	-	40
בגדי תינוקות	4.0	●	כן	●	●	95
פריטים כהים	4.0	●	כן	●	●	40
יומיומי	4.0	●	כן	●	●	60
מהירה '29	3.0	-	כן	●	-	60

תכנית	מהירות סיבוב (מקס') סל"ד WF8802RPS WF8802RPV	מהירות סיבוב (מקס') סל"ד WF8800LSS WF8800LSV	השהיית סיום תכנית	משך תכנית (דקות)
כותנה	1200	1000	●	120
סינתטי	1200	1000	●	84
אריג גס/סרבל	800	800	●	73
בגדי ספורט	1200	1000	●	65
עדינה	800	800	●	45
צמר	800	800	●	37
כביסת יד	400	400	●	30
בגדי תינוקות	1200	1000	●	129
פריטים כהים	1200	1000	●	70
יומיומי	1200	1000	●	65
מהירה '29	1200	1000	●	29

1. מחזור עם השריה אורך כ-15 דקות יותר.
2. נתוני משך המחזור נבדקו תחת התנאים המפורטים בתקן **IEC 60456 / EN 60456**.
3. הצריכה בבתים פרטיים עלולה להיות שונה מהערכים המצוינים בטבלה, כתוצאה מהשינויים בלחץ וטמפרטורת אספקת המים, קיבולת וסוג הכביסה.
4. כאשר בוחרים בפונקציה **תכנית נמרצת**, הזמן של כל התכניות מתארך.

הודעות שגיאה

כאשר מכונת הכביסה שלכם תקולה, ייתכן ותראו הודעת שגיאה בתצוגה. במקרה כזה, עיינו בטבלה ונסו את הפתרון המוצע לפני פנייה למחלקת השירות.

הודעת שגיאה	פתרון
dE	• סגרו את הדלת.
4E	• וודאו שברז אספקת המים פתוח. • בדקו את לחץ המים.
5E	• נקו את מסנן השאריות. • וודאו שצינור הניקוז מותקן כראוי.
UE	• ערימת הכביסה אינה מאוזנת. חלקו את העומס. אם רק פריט לבוש אחד מצריך כיבוס, כגון חלוק רחצה או זוג מכנסי ג'ינס, תוצאת הסיבוב הסופי עלולה שלא להיות משביעת רצון והודעת השגיאה **"UE"** תופיע בחלון התצוגה.
cE/3E	• צרו קשר עם מחלקת השירות.

עבור הודעות שגיאה שאינן מצוינות לעיל, או הפתרון המוצע אינו פותר את הבעיה, צרו קשר עם מחלקת השירות של היבואן או עם המשווק.

פתרון תקלות והודעות שגיאה

בדקו נקודות אלה אם מכונת הכביסה שלכם...

בעיה	פתרון
אינה מתחילה	• וודאו שהמכונה מחוברת לחשמל. • וודאו שהדלת סגורה היטב. • וודאו שברז(י) אספקת המים פתוח(ים). • הקפידו ללחוץ על לחצן "התחל / עצור".
אינה כוללת מים או שאין מספיק מים במכונה	• פתחו את ברז המים עד הסוף. • וודאו שצינור אספקת המים אינו קפוא. • הדקו את צינורות יניקת המים. • נקו את המסנן בצינור יניקת המים.
מכילה שאריות דטרגנט במגירת הדטרגנט בתום תהליך הכביסה	• וודאו שמכונת הכביסה מופעלת עם לחץ מים מספיק. • וודאו שהדטרגנט מוסף למרכז מגירת הדטרגנט.
רועדת או רועשת מדי	• וודאו שהמכונה מוצבת על משטח מפולס. אם המשטח אינו מפולס, כוונו את רגליות המכונה לפילוסה. • וודאו שברגי המשלוח שוחררו. • וודאו שהמכונה אינה נוגעת בחפצים אחרים. • וודאו שערימת הכביסה מאוזנת.
אינה מנקזת/מסתובבת	• הדקו את צינור הניקוז. החליפו צינורות מפותלים. • וודאו שמסנן השאריות אינו סתום.
הדלת נעולה או אינה נפתחת	• הדלת תיפתח 3 דקות לאחר שהמכונה מפסיקה או שהמתח כובה.

אם הבעיה נמשכת, צרו קשר עם מחלקת השירות של היבואן.

אחסון מכונת הכביסה

אם עליכם לאחסן את מכונת הכביסה לאורך זמן, עדיף שתנקזו ותנתקו אותה. מכונות כביסה עלולות להינזק אם נשארים מים בצינורות וברכיבים הפנימיים לפני האחסון.

1. בחרו בתכנית "מהירה '29" והוסיפו מלבין לתא המלבין. הפעילו את המכונה דרך התכנית, ללא כביסה.
2. סגרו את ברזי המים ונתקו את צינורות היניקה.
3. נתקו את המכונה משקע החשמל, והשאירו את הדלת פתוחה ע"מ להניח לתוף להתאוורר.

אם אחסנתם את מכונת הכביסה בטמפרטורות מתחת לאפס, הניחו למים שנשארו במכונה להפשיר לפני השימוש.

ניקוי מסנן השאריות

אנו ממליצים לנקות את מסנן השאריות 5 או 6 פעמים בשנה, או כאשר מוצגת הודעת השגיאה **"5E"** (עיינו בסעיף "ניקוז חירום של מכונת הכביסה").

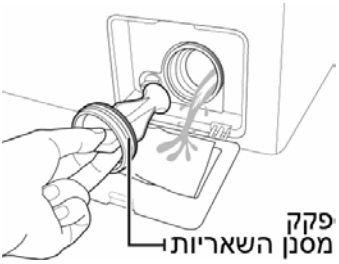

1. פתחו את דלת המסנן בעזרת מפתח או מטבע.
2. שחררו את פקק ניקוז החירום ע"י סיבובו שמאלה, ונקזו את כל המים.
3. שחררו את פקק מסנן השאריות.

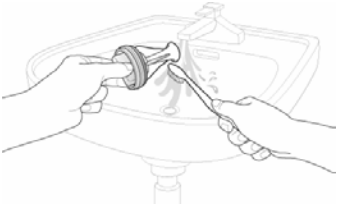

4. שטפו כל לכלוך או חומר אחר מהמסנן. וודאו שמדחף משאבת הניקוז מאחורי מסנן השאריות, אינו חסום.
5. הדקו את פקק מסנן השאריות.
6. סגרו את דלת המסנן.

ניקוי מסנן הרשת של צינור המים

עליכם לנקות את מסנן הרשת של צינור המים לפחות פעם בשנה, או כאשר מוצגת הודעת השגיאה **"4E"**.

1. סגרו את אספקת המים למכונה.
2. שחררו את הצינור מגב מכונת הכביסה. למניעת זרימת מים החוצה כתוצאה מלחץ אוויר בצינור, כסו את הצינור במטלית.
3. משכו החוצה בעדינות את מסנן הרשת מקצה הצינור בעזרת זוג מלקחיים ושטפו אותו תחת מים זורמים עד לניקויו. נקו בנוסף בתוך ומחוץ למחבר הקשור.
4. דחפו את המסנן בחזרה למקומו.
5. הדקו את הצינור בחזרה למכונת הכביסה.
6. וודאו שהחיבורים הדוקים ופתחו את הברז.

תיקון מכונת כביסה קפואה

אם הטמפרטורה צונחת מתחת לאפס ומכונת הכביסה קפואה:

1. נתקו את מכונת הכביסה.
2. שפכו מים חמים מעל הברז לשחרור צינור אספקת המים.
3. נתקו את צינור אספקת המים והשרו אותו במים חמים.
4. שפכו מים חמים לתוך תוף הכביסה והניחו להם משך 10 דקות.
5. חברו את צינור אספקת המים לברז ובדקו אם אספקת המים והניקוז פועלים כשורה.

ניקוי מגירת הדטרגנט והמגרעות

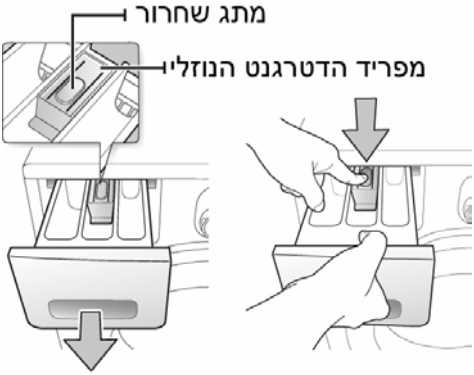

1. לחצו על מתג השחרור שבתוך מגירת הדטרגנט ומשכו אותה החוצה.
2. הוציאו את חוצץ הדטרגנט הנוזלי ממגירת הדטרגנט.

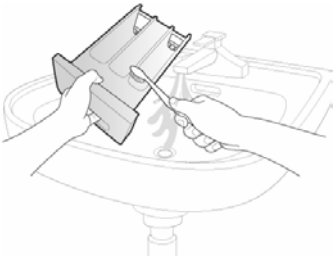

3. שטפו את כל החלקים תחת מים זורמים.

4. נקו את המגרעות בעזרת מברשת שיניים ישנה.
5. החזירו את מפריד הדטרגנט הנוזלי למקומו באמצעות דחיפתו היטב פנימה למגירה.
6. דחפו את המגירה בחזרה למקומה.
7. להסרת שאריות דטרגנט, בצעו מחזור שטיפה ללא כל כביסה בתוף.

ניקוי ותחזוקת מכונת הכביסה

שמירה על מכונת כביסה נקייה משפרת את ביצועיה, דוחה תיקונים לא נחוצים, ומאריכה את חייה.

ניקוז חירום של מכונת הכביסה

1. נתקו את מכונת הכביסה מהחשמל.
2. פתחו את דלת המסנן.

3. שחררו את פקק ניקוז החירום באמצעות סיבובו שמאלה.

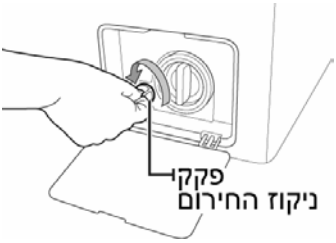

4. אחזו בפקק בקצה צינורית הניקוז ומשכו אותה החוצה באיטיות כ-15 ס"מ.
5. הניחו למים לזרום לקערה.
6. החזירו את צינורית הניקוז למקומה והבריגו בחזרה את הפקק.
7. סגרו את דלת המסנן.

ניקוי החלק החיצוני

1. נגבו את משטחי מכונת הכביסה, כולל לוח הבקרה, בעזרת מטלית רכה טבולה בדטרגנט ביתי שאינו שורט.
2. השתמשו במטלית רכה לייבוש המשטחים.
3. אל תשפכו מים על מכונת הכביסה.

מידע אודות דטרגנטים ותוספים

סוג הדטרגנט לשימוש

סוג הדטרגנט בו עליכם להשתמש תלוי בסוג האריג (כותנה, סינטטי, פריטים עדינים, צמר), צבע, טמפרטורת הכביסה ודרגת הלכלוך. השתמשו תמיד בדטרגנטים שאינם מקציפים, המיועדים למכונות כביסה אוטומטיות.

עקבו אחר המלצות יצרן הדטרגנט המבוססות על משקל הכביסה, דרגת הלכלוך וקשיות המים באזורכם. אם אינכם יודעים מהי קשיות המים באזורכם, התייעצו עם מחלקת המים בעירייה.

אל תשתמשו בדטרגנט שהתקשה או התגבש משום שהוא עלול להישאר בתהליך השטיפה. הדבר עלול לגרום לשטיפה לקויה או לגרום לסתימה.

מגירת הדטרגנט

מכונת הכביסה כוללת תאים נפרדים עבור דטרגנט ומרכך. הוסיפו את כל תוספי הכביסה לתא המתאים לפני הפעלת המכונה.

אל תפתחו את מגירת הדטרגנט כשמכונת הכביסה פועלת.

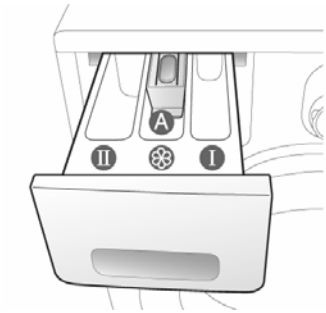

1. משכו החוצה את מגירת הדטרגנט הממוקמת בצידו השמאלי של לוח הבקרה.
2. הוסיפו את הכמות המומלצת של הדטרגנט לכביסה ישירות לתא הדטרגנט Ⅱ לפני הפעלת מכונת הכביסה.
3. הוסיפו את הכמות המומלצת של מרכך הכביסה לתא המרכך ❀, כנדרש.
4. בעת שימוש באפשרות הכביסה המקדימה, הוסיפו את הכמות המומלצת של דטרגנט לכביסה לתא הכביסה המקדימה Ⅰ.

בעת כיבוס פריטים גדולים, אל תשתמשו בסוגי הדטרגנט הבאים.

- טבליות או כמוסות דטרגנט
- דטרגנטים המשתמשים בכדור ורשת

למניעת סתימה, דללו מרככי ומייצבי כביסה מרוכזים או סמיכים עם מעט מים לפני הוספתם למגירה.

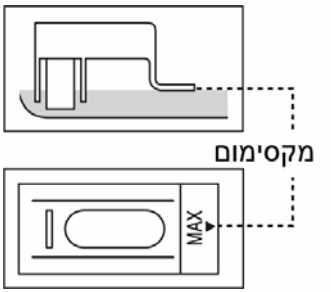

כביסה מקדימה של פריטי כותנה
מכונת הכביסה החדשה שלכם, בשילוב דטרגנטים מודרניים, תעניק תוצאות כביסה מעולות, ובכך תתרום לחיסכון באנרגיה, זמן, מים ודטרגנט. אולם, אם פרטי הכותנה שלכם מלוכלכים במיוחד, כבסו אותם קודם עם דטרגנט על בסיס חלבון.

קביעת כמות הכביסה
להשגת תוצאות כביסה טובות, אל תעמיסו את המכונה יתר על המידה. השתמשו בטבלה מטה לקביעת הקיבולת עבור סוג הכביסה אותו אתם מכבסים.

סוג האריג		קיבולת
דגם		WF8800LSS WF8802RPS WF8800LSV WF8802RPV
כותנה - מלוכלך סביר/מעט - מלוכלך מאוד	Cotton	8.0 kg
סינטטיים	Synthetics	3.0 kg
ג'ינס	Denim	3.0 kg
בגדי ספורט	Sports Wear	2.5 kg
עדינים	Delicates	2.5 kg
צמר	Wools	2.0 kg

- כשהכביסה אינה מאוזנת בתוף (החיווי **"UE"** מופיע בתצוגה), חלקו אותה מחדש. אם אינה מאוזנת, יעילות הסיבוב עלולה להיפגע.
- בעת כיבוס מצעים או כסתות, זמן הכביסה עשוי להתארך או שיעילות הסיבוב עלולה להיפגע.
- עבור מצעים וכסתות, אנו ממליצים על קיבולת של 1.8 ק"ג או פחות.

הקפידו להכניס חזיות (ניתנות לשטיפה במים) לסל כביסה (רכישה בנפרד).
- חלקי המתכן של החזיות עלולים לחדור דרך החומר ולפגוע בכביסה. לכן הקפידו להניח אותן בתוך רשת כביסה צפופה.
- פרטי ביגוד קטנים וקלים כגון גרביים, כפפות, גרבי ניילון וממחטות עלולים להיתפס סביב הדלת. הניחו אותם בתוך רשת כביסה צפופה.

הנחיות וטיפים לכביסה

עקבו אחר הנחיות פשוטות אלה לכביסה הנקייה והיעילה ביותר.

בדקו תמיד את התוויות ע"ג הבגדים לפני הכביסה.

מיינו וכבסו את הכביסה בהתאם למדדים הבאים:

- תווית: מיינו את הכביסה לכותנה, סיבים מעורבים, סינטטיים, משי, צמר ומשי מלאכותי.
- צבע: הפרידו לבנים וצבעוניים. כבסו פריטים צבעוניים חדשים בנפרד.
- גודל: הנחת פריטים שונים בגודלם באותה ערימה תשפר את פעולת הכביסה.
- רגישות: כבסו פריטים עדינים בנפרד, השתמשו בתכנית "עדינה" עבור פריטי צמר טהור חדשים, וילונות ופריטי משי. בדקו את התוויות ע"ג הפריטים לכביסה או עיינו בטבלת הטיפול באריגים בסוף החוברת.

רוקנו כיסים

לפני כל כביסה, רוקנו את כיסי הבגדים. חפצים קטנים ובעלי צורה ייחודית, כגון מטבעות, סכינים, סיכות ואטבי נייר עלולים לגרום נזק למכונה. אל תכבסו בגדים עם אבזמים גדולים, כפתורים, או כל מתכת אחרת.

מתכת על הבגדים עלולה לפגוע בהם כמו גם בתוף. הפכו בגדים עם כפתורים ובגדים מעוטרים מבפנים החוצה לפני כיבוסם. רוכסני מכנסיים וז'קטים פתוחים בעת הכביסה, עשויים לפגוע בסלסילת הסיבוב. סגרו רוכסנים ואבטחו בחוט לפני הכביסה.

בגדים עם חוטים ארוכים עלולים להסתבך עם בגדים אחרים ולפגוע בהם. אבטחו את החוטים לפני התחלת הכביסה.

כביסה ידנית

ניתן לכבס בגדים ידנית מבלי להשתמש בבורר התכניות.

1. פתחו את ברז אספקת המים.
2. לחצו על לחצן ההפעלה במכונת הכביסה.
3. פתחו את הדלת.
4. הניחו את הפריטים בתוף בפעם אחת, מבלי למלא אותו יתר על המידה.
5. סגרו את הדלת.
6. הוסיפו דטרגנט, מרכך, ודטרגנט לשלה ההשריה (במידת הצורך) לתאים המתאימים.
7. לחצו על לחצן **טמפרטורה** לבחירת הטמפרטורה (מים קרים, **30°C**, **40°C**, **60°C** ו-**95°C**).
8. לחצו על לחצן **שטיפה** לבחירת מספר מחזורי השטיפה הרצוי. ניתן לבחור עד חמישה מחזורי שטיפה. משך הכביסה מתארך בהתאם.
9. לחצו על לחצן **סחיטה** לבחירת מהירות הסחיטה. פונקצית השהיית השטיפה מאפשרת לכם להוציא את הפריטים בעודם רטובים מהמכונה (: ללא סיבוב, : השהיית שטיפה).
10. לחצו על לחצן "בורר השהיה" במחזוריות למעבר בין אפשרויות הסיום המושהה השונות (מ-3 ועד 19 שעות במרווחים של שעה). השעה המוצגת מציינת את זמן סיום התכנית.
11. לחצו על לחצן **התחל / עצור** ומכונת הכביסה תחל בתהליך.

כביסה באמצעות בורר התכניות

מכונת הכביסה החדשה שלכם עושה את מלאכת הכביסה לקלה, באמצעות מערכת הבקרה האוטומטית **"Fuzzy Control"** של **Samsung**. כאשר אתם בוחרים תכנית כביסה, המכונה תקבע את הטמפרטורה, משך הכביסה והמהירות הנכונים.

1. פתחו את ברז המים בכיור.
2. לחצו על לחצן ההפעלה.
3. פתחו את הדלת.
4. הניחו את הפריטים בתוף אחד אחרי השני בחופשיות, מבלי למלא אותו יתר על המידה.
5. סגרו את הדלת.
6. הוסיפו דטרגנט, מרכך, ודטרגנט לכביסה מקדימה (במידת הצורך) לתאים המתאימים.

הכביסה המקדימה זמינה רק כאשר נבחרו התכניות: כותנה, סינתטי, אריג גס / סרבל (דגם **8802RP** בלבד), פריטים כהים, בגדי תינוקות, בגדי ספורט, יומיומי. היא נחוצה רק אם הבגדים שלכם מלוכלכים מאוד.

7. השתמשו בבורר התכניות לבחירת התכנית המתאימה בהתאם לסוג החומר: כותנה, סינטטיים, ג'ינס, בגדי ספורט, עדינים, צמר, כביסה ביד, בגדי ילדים, בגדים כהים, כביסה יום-יומית, כביסה מהירה '29. החיוויים המתאימים יאירו בלוח הבקרה.
8. בזמן זה, תוכלו לשלוט בטמפרטורת הכביסה, בכמות השטיפות, מהירות הסיבוב, ומשך ההשהיה, באמצעות לחיצה על הלחצנים המתאימים.
9. לחצו על לחצן **התחל / עצור** להתחלת הכביסה. נורית חיווי התהליך תאיר ומשך הזמן הנותר לסיום הכביסה יופיע בתצוגה.

השהיה

תוך 5 דקות מתחילת הכביסה, ניתן להוסיף/להסיר פריטי כביסה.

1. לחצו על לחצן **התחל / עצור** לפתיחת נעילת הדלת.

לא ניתן לפתוח את הדלת כאשר המים לוהטים מדי או כאשר מפלס המים גבוה מדי.

2. לאחר סגירת הדלת, לחצו על לחצן **התחל / עצור** לחידוש הכביסה.

בתום מחזור הכביסה:

בתום התהליך, המכונה תכבה אוטומטית.

1. פתחו את הדלת.
2. הוציאו את הכביסה.

Air רענון

ניתן לרענן את הכביסה באמצעות תהליך הרענון, ללא צורך במים, הודות למערכת הרענון העוצמתית. ניתן לרענן מעילי צמר, כותנה או אפודות, סוודרים וחליפות (2 פריטים או פחות (פחות מ-1 ק"ג)).

1. פתחו את הדלת, הניחו את הכביסה במכונה וסגרו את הדלת.
2. לחצו על לחצן ההפעלה.
3. לחצן על לחצן "**Air** רענון".

- בכל לחיצה על הלחצן, מצב ההפעלה משתנה בסדר הבא: סריגים ← חליפות ← כלי מיטה ← סריגים ← ...

מצב	אורך המחזור
כלי מיטה	46 דקות
חליפות	39 דקות
סריגים	29 דקות

- כאשר אחת מאפשרויות אלה נבחרה, לא ניתן לבחור בלחצן אחר, מלבד בחירה בזמן הסיום המושהה בין 3:00 - 19:00.

4. סגרו את הדלת ולחצו על לחצן **התחל/עצור**.

- כאשר ישנם מים בתוף, לא ניתן לבחור בלחצן "**Air** רענון". נקזו את המים ובחרו בלחצן "**Air רענון**".
- לחצו על לחצן **התחל עצור** או על **לחצן ההפעלה**, להוצאת הכביסה.
- ניתן להשתמש בחומרי ריח או בניירות למייבש עם תכניות "**Air רענון**". להוספת ניחוח לכביסה המרוענת (נייר אחד עבור פריט אחד או יותר).

הימנעו מרענון הבגדים הבאים:

- בגדים עדינים העשויים עור, מינק, פרווה, משי וכד'.
- פריטי הלבשה תחתונה מעוטרים בתחרה, כריות בובה "מודבקות", ומערכות שמלה שקישוטיהן עלולים להשתחרר.
- בגדים עם כפתורים, שעלולים להישבר.
- בגדים מעומלנים עלולים להתפרק.
- כלי מיטה קשים כגון כריות עץ (משענות צוואר)
- כריות או שמיכות הממולאות פלסטיק או עמילן, ולא כותנה
- שמיכות חשמליות
- שמיכות פרווניות
- שמיכות גדולות
- כריות לטקס

נעילת ילדים

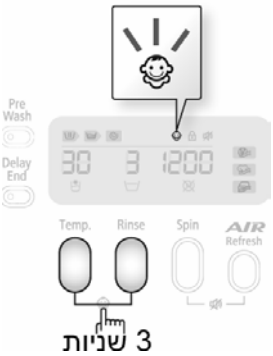

פונקצית נעילת הילדים מאפשרת לכם לנעול את הלחצנים כך שתכנית הכביסה שבחרתם אינה ניתנת לשינוי.

הפעלה/ביטול

אם ברצונכם להפעיל או לבטל את פונקצית נעילת הילדים, לחצו על הלחצנים **"שטיפה"** ו-**"טמפרטורה"** יחדיו, משך 3 שניות. החיווי "נעילת ילדים" יאיר, כאשר הפונקציה מופעלת.

כאשר פונקצית נעילת הילדים מופעלת, רק לחצן ההפעלה פעיל. פונקצית נעילת הילדים נשארת פעילה גם כאשר המכונה מופעלת ומכובה או לאחר ניתוק וחיבור כבל המתח.

השתקת החיווי הקולי

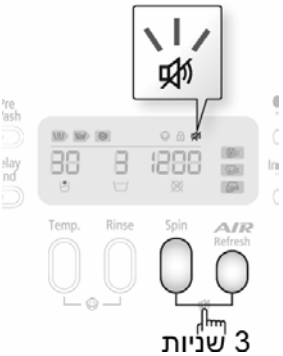

ניתן לבחור בפונקצית השתקת החיווי הקולי עבור כל הפעולות. כאשר הפונקציה נבחרת, החיווי הקולי מושתק עבור כל הפעולות. גם אם המכונה מופעלת ומכובה לסירוגין, ההגדרה נשמרת.

הפעלה/ביטול

אם ברצונכם להפעיל או לבטל את פונקצית השתקת החיווי הקולי, לחצו על הלחצנים **"סחיטה"** ו-**"AIR רענון"** במקביל במשך 3 שניות. החיווי "השתקה" יאיר, כאשר הפונקציה מופעלת.

בורר השהיה (השהיית סיום תכנית)

ניתן לכוון את מכונת הכביסה לסיים אוטומטית את הכביסה במועד מאוחר יותר, באמצעות בחירת ההשהיה בין 3 ל-19 שעות (במרווחים בני שעה אחת). השעה המוצגת מציינת את הזמן בו הכביסה תסתיים.

1. כוונו ידנית או אוטומטית את מכונת הכביסה, בהתאם לסוג הכביסה אותה אתם מכבסים.
2. לחצו על לחצן **"בורר השהיה"** במחזוריות עד לכיוון זמן ההשהיה.
3. לחצו על לחצן **"התחל / עצור".** החיווי "השהיית סיום תכנית" יאיר, והשעון יחל בספירה לאחור עד שיגיע לשעה שקבעתם.
4. לביטול פונקצית השהיית סיום התכנית, לחצו על לחצן ההפעלה ולאחר מכן הפעילו שוב את המכונה.

7 **בורר מהירות הסחיטה**	לחצו על לחצן זה במחזוריות למעבר בין אפשרויות מהירות מחזורי הסיבוב. WF8802RPS / WF8802RPV: 400, 800, 1000, 1200 rpm WF8800LSS / WF8800LSV: 400, 600, 800, 1000 rpm "ללא סיבוב" - הכביסה נשארת בתוף ומחזור סיבוב לא מבוצע בתום הניקוז הסופי. "השהיית שטיפה" - הכביסה נשארת מושרית במי השטיפה הסופית. כדי שניתן יהיה להוציא את הכביסה, יש לבצע מחזור ניקוז או סיבוב.
8 **לחצן AIR רענון (ניקוי יבש)**	לחצו על לחצן זה לרענון הבגדים מחיי היום-יום. מחזור הרענון יכול לרענן אותם ללא מים ומכין אותם לשימוש מיידי. "סריגים" - רענון סריגים כגון סוודרים ואפודות, כמו גם חולצות וחולצות נשים, הניתנים לרענון משך 30 דקות. "חליפות" - רעננו חליפות ובגדי עסקים. תכנית זו תקפה גם לגבי ז'קטים יום-יומיים ומעילים קלים. "כלי מיטה" - רעננו ואוררו כלי מיטה כגון שמיכות קלות, מצעים וכריות.
9 **לחצן תכנית נמרצת**	לחצו על לחצן זה כאשר הכביסה מלוכלכת מאוד ומצריכה כביסה נמרצת. עם כל מחזור, זמנו מתארך.
10 **דגם 8800LS**	ביטול התראה – ביטול פעולת הזמזם
10 **דגם 8802RP**	אל קמט – תכנית המונעת את קימוט הבד ומסייעת בגיהוץ.
11 **לחצן התחל / עצור**	לחצו להשהיית וחידוש המחזור.
12 **לחצן ההפעלה**	לחצו עליו פעם אחת להפעלת המכונה, לחצו עליו שוב לכיבויה. אם המכונה פועלת משך 10 דקות מבלי שנלחצו לחצנים כלשהם, המתח כובה אוטומטית.

בורר התכניות המשך...	**כביסת יד** - תכנית כביסה קלילה ועדינה כמו כביסה ביד. **בגדי תינוקות** - כביסה בטמפרטורה גבוהה וכביסות נוספות מבטיחים שלא תישאר אבקת כביסה על בגדי ילדיכם. פריטים כהים - שטיפות נוספות ומהירויות סיבוב מופחתות מבטיחות שהבגדים הכהים שלכם מכובסים היטב ובעדינות. **יומיומי** - השתמשו לפריטים יום-יומיים כגון לבנים וחולצות. **מהירה '29 (כביתכניתסה מהירה)** - עבור בגדים מלוכלכים קלות, להם אתם זקוקים במהירות. **ניקוז** - פשוט נקזו את המים מהמכונה ללא סיבוב. **סחיטה** - ביצוע מחזור סיבוב נוסף להוצאת כמות מים גדולה יותר. **שטיפה + סחיטה** - השתמשו לכביסה המצריכה שטיפה בלבד או לשילוב מרכך הכביסה שהוספתם.
3 **לחצן כביסה מקדימה**	לחצו על לחצן זה לבחירת כביסה מקדימה. כביסה מקדימה זמינה אך ורק עם התכניות: כותנה, סינטטי, אריג גס / סרבל (דגם **8802RP** בלבד), סגדי ספורט, בגדי תינוקות, פריטים כהים, יומיומי.
4 **בורר השהייה**	לחצו על לחצן זה לחיצות חוזרות למעבר בין אפשרויות הסיום המושהה השונות (מ-3 ועד 19 שעות במרווחים של שעה אחת). השעה המוצגת מציינת את זמן סיום התכנית.
5 **בורר הטמפרטורה**	לחצו על לחצן זה במחזוריות למעבר בין אפשרויות טמפרטורת המים: (מים קרים, **30°C**, **40°C**, **60°C** ו-**95°C**).
6 **בורר השטיפה**	לחצו על לחצן זה להוספת מחזורי שטיפה נוספים. ניתן לקבוע עד חמישה מחזורי שטיפה.

1 תצוגה דיגיטלית גרפית	מציגה את הזמן הנותר לסיום התכנית, מידע על התכנית, והודעות שגיאה.
2 בורר התכניות	בחרו את סוג הכביסה ואת מהירות הסיבובים עבור התכנית. למידע מפורט, עיינו בסעיף "כביסה באמצעות בורר התכניות". **כותנה -** עבור פריטי כותנה מלוכלכים בדרגה קלה או סבירה, כלי מיטה, כלי שולחן, לבנים, מגבות, חולצות וכד'. **סינתטי** - עבור חולצות וחולצות נשים מלוכלכות בדרגה קלה או סבירה וכד', המיוצרות מפוליאסטר (דיאולן, טרווירה), פוליאמיד (פרלון, ניילון) או תערובות דומות אחרות. **אריג גס / סרבל (דגם 8802RP בלבד)** - מפלס מים גבוה יותר בכביסה העיקרית וכביסה נוספת מבטיחים שלא תישאר אבקת כביסה, העלולה להכתים את הבגדים שלכם. **בגדי ספורט** - השתמשו עבור בגדים עמידים במים או בגדים עמידים לשמירת מראם הטוב ומגעם המרענן. **עדינה** - עבור בדים שקופים, חזיות, הלבשה תחתונה, שמלות, חולצות וחולצות נשים. לתוצאות הטובות ביותר, השתמשו בנוזל כביסה. **צמר** - רק עבור פריטי צמר הניתנים לכביסה במכונה. על משקל הערימה להיות פחות מ-3.6 ק"ג. תכנית הכביסה עבור פריטי צמר במכונה זו מיועדת לפריטי צמר הניתנים לכביסה במכונה, מתוך הנחה שהם מכובסים בהתאם להוראות המודפסות ע"ג התווית והוראות יצרן מכונת הכביסה.

לוח הבקרה

דגם 8802RP

דגם 8800LS

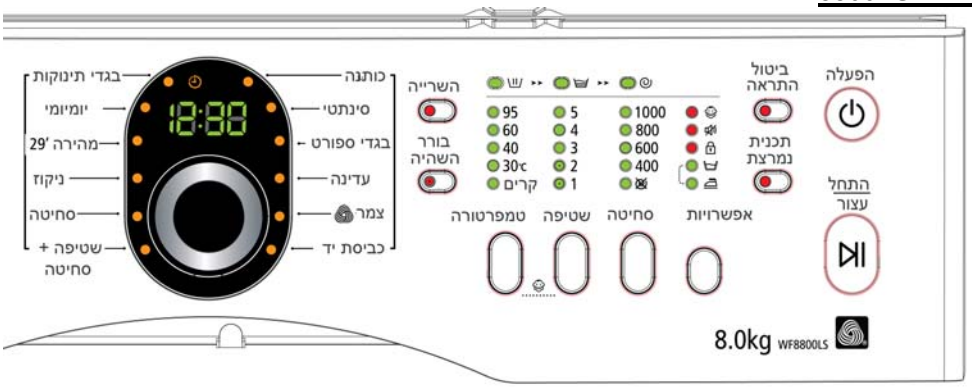

כביסה במכונה

עם מכונת הכביסה החדשה שלכם מתוצרת **Samsung**, החלק קשה ביותר בביצוע הכביסה יהיה איזו ערימה לכבס קודם.

ביצוע כביסה בפעם הראשונה

לפני ביצוע הכביסה בפעם הראשונה, חובה עליכם להריץ מחזור שלם ללא כביסה.

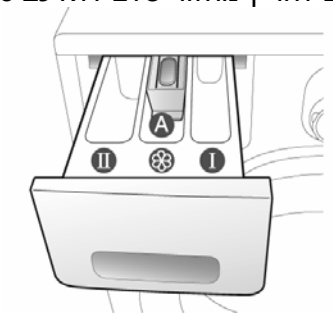

1. לחצו על לחצן ההפעלה **Power**.
2. הוסיפו מעט דטרגנט לתא הדטרגנט Ⅱ במגירת הדטרגנט.
3. פתחו את ברז אספקת המים למכונה.
4. לחצו על לחצן **Start/Pause** (התחל/השהה).

פעולה זו תנקז את שאריות המים שעלולות להיות במכונה, לאחר תהליך ההרצה אצל היצרן.

תא Ⅰ: דטרגנט לכביסה מקדימה, או עמלון.
תא Ⅱ: דטרגנט לכביסה העיקרית, מרכך מים, חומר קדם-השריה, מלבינים ומסירי כתמים.
תא ❀: תוספים, לדוגמה מרככי בדים או מייצבים (אל תמלאו מעל הקצה התחתון **(MAX)** של **"A"**).

הוראות בסיסיות

1. הכניסו כביסה למכונה.

אזהרה

אל תעמיסו על המכונה. לבדיקת הקיבולת המתאימה עבור כל כביסה, עיינו בטבלה בהמשך החוברת.

- וודאו שהכביסה לא נתפסה בדלת, היות והדבר עלול לגרום לדליפת מים.
- ייתכן ויישאר דטרגנט בחלק הגומי הקדמי של התוף לאחר מחזור הכביסה. הסירו את שאריות הדטרגנט, היות והדבר עלול לגרום לדליפת מים.
- אל תכבסו פריטים עמידים במים.

2. סגרו את הדלת עד לנעילתה.
3. הפעילו את המכונה.
4. הוסיפו דטרגנטים ותוספים למגירה.
5. בחרו את התכנית המתאימה ואת האפשרויות עבור הכביסה. נורית חיווי הכביסה תאיר ומשך תהליך הכביסה המשוער יופיע בתצוגה.
6. לחצו על לחצן **Start/Pause**.

חיבור צינור הניקוז

ניתן לחבר את קצה צינור בשלושה אופנים:

1. מעל קצה כיור הרחצה: חובה להציב את צינור הניקוז בגובה שבין 60 ל-90 ס"מ. לשמירה על פייה מעוקלת, השתמשו במוביל הצינור הפלסטי המסופק. אבטחו את המוביל לקיר עם וו או עם פיסת חוט לברז, למניעת תזוזת הצינור.

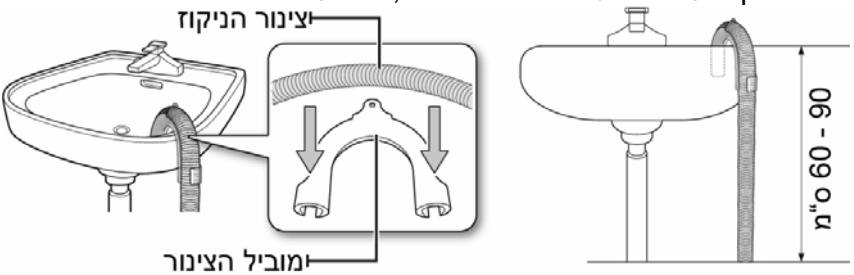

2. במסעף צינור הניקוז בכיור: על מסעף צינור הניקוז להיות מעל סיפון הכיור, כך שקצה הצינור נמצא לפחות 60 ס"מ מעל הרצפה.
3. בצינור ניקוז: אנו ממליצים להשתמש בצינור אנכי בגובה 65 ס"מ; על אורך הצינור להיות בין 65 ל-95 ס"מ.

שלב 5

<u>הפעלת מכונת הכביסה</u>

- חברו את הכבל לשקע החשמל, המאושר **230 V 50 Hz** והמוגן בנתיך 15 אמפר או מפסק פחת (למידע נוסף אודות דרישות החשמל וההארקה, עיינו בסעיף המתאים).

חיבור צינור אספקת המים (בדגמים נבחרים)

1. הסירו את המתאם מצינור אספקת המים.

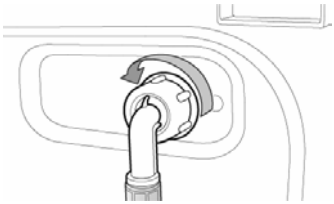

2. חברו את קצהו השני של צינור אספקת המים לשסתום יניקת המים בגב מכונת הכביסה. הדקו אותו בכיוון השעון כל הדרך פנימה.

- חברו את צינור אספקת המים לברז, כמתואר באיור.

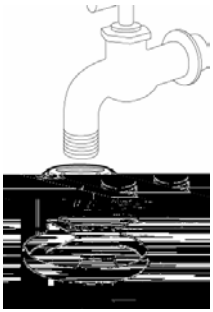

השתמשו בסוג הברז הנפוץ ביותר לאספקת המים. במידה והברז מרובע או גדול מדי, הסירו את הטבעת המרווחת לפני הכנסת הברז למתאם.

שלב 3

<u>כיוון רגלית הפילוס</u>

בעת התקנת מכונת הכביסה, וודאו שכבל החשמל וצינורות אספקת המים והניקוז - נגישים בקלות.

1. הזיזו את מכונת הכביסה למקומה.

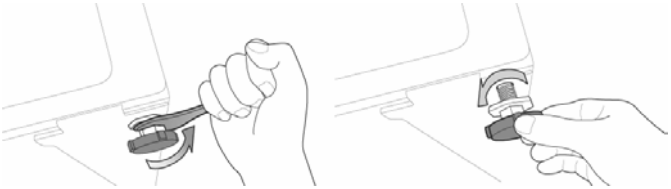

2. פלסו את מכונת הכביסה באמצעות סיבוב ידני של רגליות הפילוס פנימה והחוצה, כנדרש.

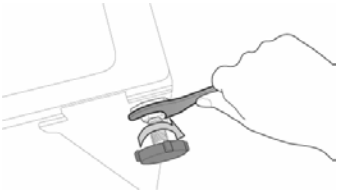

3. כאשר מכונת הכביסה מפולסת, הדקו את האומים באמצעות מפתח הברגים המסופק עם המכונה.

שלב 4

<u>חיבור צינורות המים והניקוז</u>

חיבור צינור אספקת המים

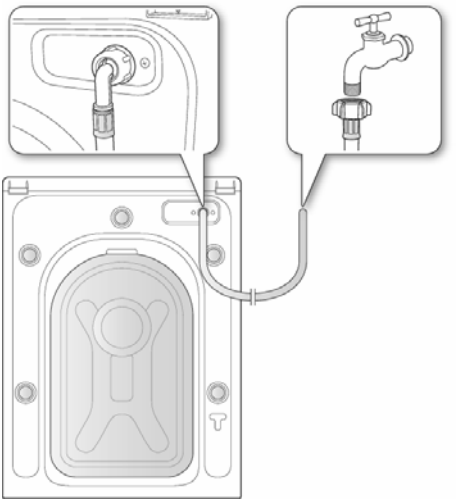

1. קחו את זרוע ההתאמה בצורת **L** עבור צינור אספקת המים הקרים וחברו אותה לפתח יניקת המים הקרים בגב המכונה. הדקו ידנית.

חברו קצה אחד של צינור אספקת המים למכונה ואת הקצה השני לברז המים. אל תמתחו אותו. אם הוא קצר מדי, החליפו אותו בצינור ארוך יותר ועמיד בלחץ גבוה.

2. חברו את הקצה השני של צינור אספקת המים הקרים לברז המים הקרים בכיור והדקו ידנית. במידת הצורך, תוכלו למקם מחדש את צינור אספקת המים במכונה באמצעות שחרורו והתאמתו, סיבובו, הידוקו והתאמתו.

שלב 2

<u>שחרור ברגי ההובלה</u>

לפני התקנת מכונת הכביסה, עליכם לשחרר את חמשת ברגי ההובלה מגב המכונה.

1. שחררו את כל הברגים בעזרת המפתח המסופק.

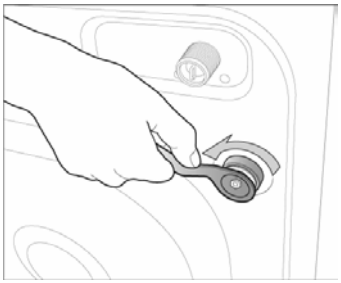

2. אחזו בבורג בעזרת מפתח הברגים ומשכו אותו החוצה דרך החלק הרחב של החור. חזרו על התהליך עבור שאר הברגים.

3. כסו את החורים בעזרת חיפויי הפלסטיק המסופקים.

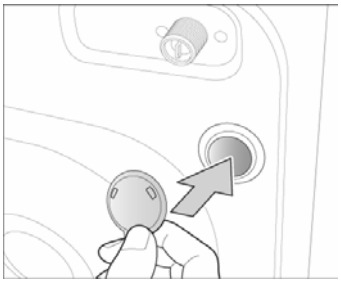

4. אחסנו את ברגי המשלוח במקום בטוח, במידה ויהיה עליכם להזיז את המכונה בעתיד.

אזהרה

חומרי האריזה עלולים להיות מסוכנים לילדים; הרחיקו את כל חומרי האריזה (שקיות פלסטיק, פוליסטירן וכד'), מהישג ידם של ילדים.

ניקוז

Samsung ממליצה על צינור אנכי בגובה 46 ס"מ. על צינור הניקוז להיות מנותב לצינור האנכי דרך אטב צינור הניקוז. על הצינור האנכי להיות ארוך מספיק על מנת לקלוט את הקוטר החיצוני של צינור הניקוז. צינור הניקוז מורכב במפעל.

פילוס

לביצועים הטובים ביותר, על המכונה להיות מוצבת על רצפה יציבה. רצפות עץ עשויות לדרוש חיזוק על מנת לצמצם רעידות ו/או ערימות כביסה לא מאוזנות. שטיחים ומשטחי אריחים רכים תורמים ליצירת רעידות ולנטיית מכונת הכביסה לזוז קמעה בעת תהליך הכביסה.

טמפרטורת הסביבה

אל תתקינו את מכונת הכביסה באזורים בהם המים עלולים לקפוא, היות והמכונה אוגרת תמיד מעט מים בשסתומים, במשאבה ובאזורי הצנרת. מים קפואים בצנרת עלולים לגרום נזק לרצועות, למשאבה ולרכיבים אחרים. השתמשו תמיד במכונה כשטמפרטורת הסביבה היא **16°C** לפחות.

התקנה בגומחה או ארון

להפעלה בטוחה ונכונה, מכונת הכביסה מצריכה מרווחים מינימאליים של:

מהצדדים - 25 מ"מ מאחור - 51 מ"מ

מלמעלה - 25 מ"מ

אם מכונת הכביסה מותקנת בצמוד למייבש, על חזית הגומחה או הארון להכיל מעבר אוויר פתוח בשטח 465 סמ"ר לפחות. מכונת הכביסה לבדה אינה מצריכה מעבר אוויר מסוים.

התקנת מכונת הכביסה

שלב 1

<u>בחירת המיקום</u>

לפני התקנת מכונת הכביסה, וודאו שהמיקום:

- בעל משטח קשה ומפולס, ללא שטיחים או אריחים, העלולים לחסום את פתחי האוורור
- נמצא הרחק מאור שמש ישיר
- כולל אוורור מספיק
- לא יקפא (מתחת ל-**0°C**)
- נמצא הרחק ממקורות חום כגון נפט או גז
- מרווח מספיק, כך שהמכונה לא תעמוד על כבל המתח

עמידה בדרישות ההתקנה

אספקת חשמל והארקה

למניעת סיכון מיותר בשריפה, התחשמלות או פציעה, על החיווט וההארקה להתבצע בהתאם לחוקים והתקנות המקומיים. באחריותכם לספק שירות חשמלי למכשיר.

לעולם אל תשתמשו בכבל מאריך. השתמשו תמיד בכבל המסופק עם המכשיר.

בעת ההכנות להתקנה, וודאו שמקור המתח מציע:

- נתיך **220V~240V 50Hz 15 AMP** או מפסק פחת
- מעגל נפרד עבור מכונת הכביסה

על מכונת הכביסה להיות מוארקת. אם המכונה מתקלקלת או ניזוקה, ההארקה תצמצם את הסיכון שבהתחשמלות באמצעות אספקת נתיב בעל התנגדות מופחתת לזרם החשמלי. המכונה מגיעה עם כבל מתח הכולל תקע הארקה בעל 3 פינים, לשימוש עם שקע חשמלי מותקן כראוי ומוארק.

לעולם אל תחברו את חוט ההארקה לקווי צנרת מים פלסטיים, קווי גז או צינורות מים חמים.

חיבור לא נכון של ההארקה עלול לגרום להתחשמלות. בדקו עם חשמלאי או טכנאי מוסמכים במידה ואינכם בטוחים אם מכונת הכביסה מוארקת כראוי. אל תחליפו את התקע המסופק עם המכונה. אם הוא אינו מתאים לשקע, הוא יוחלף רק על ידי חשמלאי מוסמך.

אספקת מים

מכונת הכביסה תתמלא כראוי אם לחץ המים הוא **50 kPa - 800 kPa**. לחץ מים נמוך מ- **50 kPa** עלול לגרום לכשל בשסתום המים, ובכך למנוע ממנו להיסגר לחלוטין. לחלופין, למכונה ייקח זמן רב יותר להתמלא ממה שהבקרים מאפשרים, ובכך לגרום לכיבויה (הבקרים כוללים התקן המגביל את משך המילוי, והוא מיועד למניעת הצפות, אם צינור פנימי השתחרר).

על ברזי המים להיות במרחק שאינו עולה על 122 ס"מ מגב המכונה, כך שצינורות אספקת המים המסופקים, יגיעו למכונה.

רוב החנויות לחומרי בניין מוכרות צינורות אספקת מים באורכים שונים עד 305 ס"מ.

ניתן להפחית את הסיכון שבדליפות ונזק מים באמצעות:

- מתן גישה קלה לברזי המים.
- סגירת הברזים כאשר המכונה אינה בשימוש.
- בדיקה דליפות תקופתית במחברי הצינורות.

אזהרה

לפני השימוש במכונה בפעם הראשונה, בדקו דליפות בכל החיבורים בשסתום המים והברזים.

התקנת מכונת הכביסה

הקפידו שהמתקין יפעל בהתאם להוראות אלה, כך שמכונת הכביסה החדשה שלכם תפעל כראוי וכך שלא תימצאו בסכנת פציעה בעת ביצוע כביסה.

תכולת האריזה וחלקי המכונה

הסירו בעדינות את האריזה, וודאו שקיבלתם את כל החלקים המוצגים מטה. אם מכונת הכביסה נפגעה בעת המשלוח, או שאין בידכם את כל החלקים, פנו למשווק.

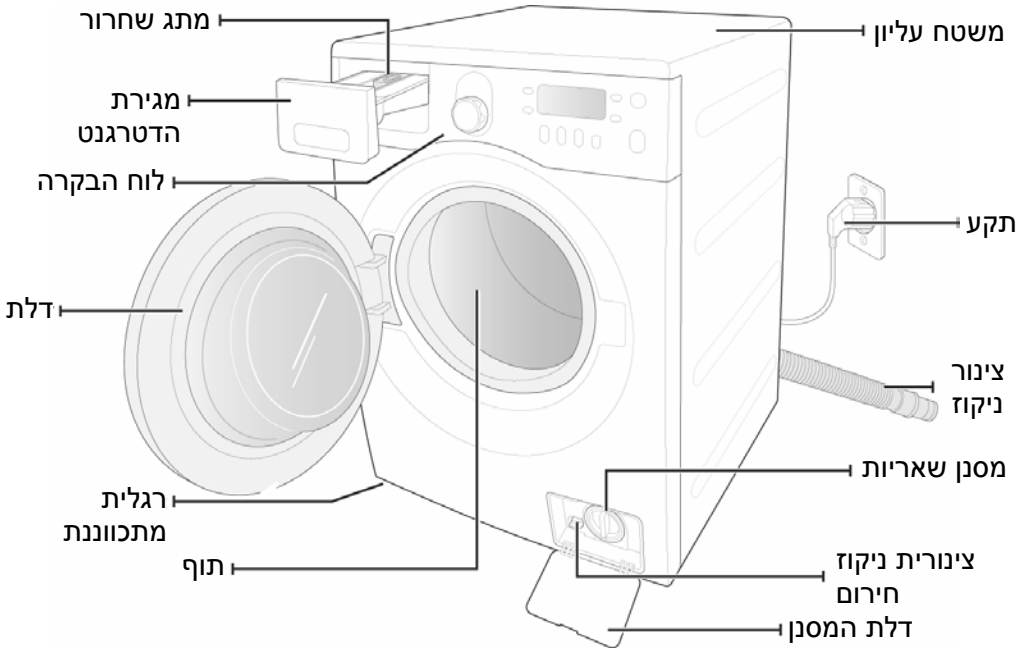

מפתח ברגים | חיפויים לחורי הברגים | צינור אספקת מים | מוביל הצינור

תוכן העניינים

מאפייני מכונת הכביסה החדשה שלכם 2
הוראות בטיחות 4
הוראות וסימני בטיחות חשובים 4
התקנת מכונת הכביסה 9
תכולת האריזה וחלקי המכונה 9
עמידה בדרישות ההתקנה 10
התקנת מכונת הכביסה 11
כביסה במכונה 16
ביצוע כביסה בפעם הראשונה 16
הוראות בסיסיות 16
שימוש בלוח הבקרה 17
נעילת ילדים 21
השתקת החיווי הקולי 21
השהיית סיום תכנית 21
Air refresh (רענון) 22
כביסה באמצעות בורר התכניות 23
כביסה ידנית 24
קווי עזר לכביסה 25
מידע אודות דטרגנטים ותוספים 27
ניקוי ותחזוקת מכונת הכביסה 28
ניקוז חירום של מכונת הכביסה 28
ניקוי החלק החיצוני 28
ניקוי מגירת הדטרגנט והמגרעות 29
ניקוי מסנן השאריות 30
ניקוי מסנן הרשת של צינור המים 30
תיקון מכונת כביסה קפואה 30
אחסון מכונת הכביסה 31
פתרון תקלות והודעות שגיאה 32
בדקו נקודות אלה אם מכונת הכביסה שלכם 32
הודעות שגיאה 33
טבלת תכניות 34
מידע נוסף 35
טבלת טיפול באריגים 35
הגנה על הסביבה 35
הצהרת תאימות 35
מפרטים טכניים 36

מכשיר זה אינו מיועד להפעלה ע"י ילדים או אנשים מוגבלים, אלא אם הם תחת השגחת אדם מתאים.

יש להשגיח על ילדים קטנים ע"מ שלא ישחקו עם המכשיר.

לשימוש בטוח במכשיר, על המשתמש להתוודע להוראות ההפעלה ולהפעיל אותו תוך מתן תשומת לב.

יש להציב את המכשיר כך שהתקע, ברזי אספקת המים וצינורות הניקוז יהיו נגישים.

אל תשתמשו במים מעובדים המכילים שמנים, קרמים או תחליבים, הנמצאים בד"כ בחנויות טיפוח.

- אחרת, הדבר עלול לגרום לפירוק האריזה, דבר העלול לגרום לתקלה או דליפת מים.

תוף הכביסה אינו מחליד בד"כ. אולם, אם מתכות שונות כגון סיכות לשיער, מושארות בו לאורך זמן, הוא עלול להחליד.

- אל תשאירו בתוף מים או חומר מלבין המכיל כלור, לאורך זמן.
- אל תשתמשו באופן קבוע או אל תשאירו בתוף מים המכילים ברזל, לאורך זמן. אם כתמי חלודה מתחילים להופיע על משטח התוף, השתמשו במסיר חלודה (נייטרלי) ובספוג או מטלית רכה לניקוי (לעולם אל תשתמשו במברשת ברזל).

עבור מכונות כביסה עם פתחי אוורור בתחתית, וודאו שהפתחים אינם חסומים ע"י שטיח או כל מכשול אחר.

השתמשו בערכת צינורות חדשה.

הסימול על המוצר או על האריזה מסמן שהמוצר לא יטופל כאשפה ביתית רגילה. במקום זאת יש להעביר אותו לנקודת איסוף לצורך מחזור הרכיבים החשמליים והאלקטרוניים. הקפדה על הוראות המחזור תבטיח את שמירת איכות הסביבה. אי הקפדה על מילוי ההוראות תפגע באיכות הסביבה ובבריאות האנשים סביבכם. לפרטים נוספים בנושא המחזור התקשרו לרשויות המתאימות או לחנות בה רכשתם את המוצר.

לפני כביסת בגדים בפעם הראשונה, עליכם להריץ מחזור שלם ללא בגדים. ראו "כביסה בפעם הראשונה".

המכשיר מיועד לשימוש ביתי בלבד.

אזהרה

הקפידו שחיבורי המים והחשמל ייעשו ע"י טכנאים מוסמכים, שיפעלו בהתאם להוראות היצרן (ראו "התקנת מכונת הכביסה") ולהוראות הבטיחות המקומיות.

לפני ניקוי או תחזוקה, נתקו את המכונה משקע החשמל.

נתקו תמיד את המכונה והפסיקו את המים לאחר השימוש.

וודאו שכיסי הבגדים לכביסה ריקים.

חפצים קשים וחדים, כגון מטבעות, סיכות ביטחון, מסמרים, ברגים, או אבנים עלולים לגרום נזק כבד למכונה.

לעולם אל תאפשרו לחיות מחמד או לילדים לשחק על או בתוך המכשיר. הדבר עלול לגרום לפציעתם או לחניקתם.

דלת הזכוכית מתלהטת בעת מחזור הכביסה. לעולם אל תגעו בדלת כשהמכונה בשימוש.

אל תנסו לתקן את המכונה בעצמכם. תיקונים המבוצעים ע"י אנשים לא מנוסים או שלא עברו הכשרה עלולים לגרום לפציעה ו/או לגרום נזק רב יותר למכשיר.

אם התקע או כבל המתח ניזוקו, יש להחליפם ע"י היצרן או ע"י סוכן השירות שלו או ע"י אדם מוסמך דומה, למניעת סכנה.

על השירות למכשיר זה להינתן ע"י מרכז השירות המורשה בלבד, ובאמצעות חלפים מדורגים בלבד.

אזהרה

אל תאפשרו לחיות מחמד או לילדים לשחק על או בתוך המכשיר. דלת מכונת הכביסה אינה נפתחת בקלות מבפנים, וילדים עלולים להיפצע באופן חמור אם יילכדו בפנים.

זהירות להפחתת סיכון של שריפה או פיצוץ:

- אל תכבסו פריטים שנשטפו, הוטבלו או טופלו בדלק, חומרי ניקוי יבש, או חומרים דליקים או נפיצים אחרים. הם פולטים אדים העלולים להידלק או להתפוצץ. שטפו ביד כל חומר שנחשף לחומרי ניקוי ממיסים או נוזלים או מוצקים דליקים אחרים, לפני הכנסתו למכונת הכביסה. וודאו שכל השרידים של נוזלים, מוצקים ואדים כאלו, הוסרו. חומרים מסוכנים כוללים אצטון, אלכוהול מפוגל, דלק, קרוסין, חומרי ניקוי ביתיים מסוימים ומסירי כתמים, טרפנטין, שעווה ומסירי שעווה.
- אל תכניסו למכונת הכביסה חומרי דלק, ניקוי יבש, או כל חומר דליק או נפיץ אחר.
- בתנאים מסוימים, גז מימני עלול להיווצר במערכת מים חמים, כגון מחמם המים שלכם, שלא הייתה בשימוש משך שבועיים או יותר. **גז מימני הוא נפיץ**. אם מחמם המים שלכם לא היה בשימוש משך שבועיים או יותר, סגרו את כל ברזי המים החמים בבית, והניחו למים לזרום במשך מספר דקות לפני השימוש במכונת הכביסה. פעולה זו תשחרר את כל הגז שהצטבר. היות וגז מימני הוא דליק, אל תעשנו ואל תדליקו להבה גלויה בעת ביצוע הפעולה.

במקרה של דליפת גז, אוררו מידית מבלי לגעת בתקע החשמלי.

נתקו את כבל המתח לפני תחזוקת מכונת הכביסה.
לפני כל כביסה, רוקנו את כיסי הבגדים. חפצים קטנים ובעלי צורה ייחודית, כגון מטבעות, סכינים, סיכות ואטבי נייר עלולים לגרום נזק למכונה. אל תכבסו בגדים עם אבזמים גדולים, כפתורים, או כל מתכת אחרת.

אל תפתחו את דלת המכונה אם אתם עדיין רואים מים. בדקו שהמים נוקזו לפני פתיחת הדלת.

אל תתקנו, אל תחליפו ואל תעניקו שירות לאף חלק של מכונת הכביסה בעצמכם, אלא אם אתם מבינים במלואן את ההוראות המומלצות לתיקון בידי המשתמש, ואתם בעלי הכישורים לבצען. עבודה המבוצעת בידי אדם לא מוסמך עלולה לגרום לפקיעת האחריות.

חברו את מכונת הכביסה לזרם המים באמצעות ערכת צינורות חדשה. אל תשתמשו בערכה הישנה.

צינורות אספקת המים מתבלים עם הזמן. בדקו אותם תקופתית לבליטות, פיתולים, חתכים, בלאי ודליפות, והחליפו אותם כנדרש אחת לחמש שנים.

חומרי האריזה עלולים להיות מסוכנים לילדים; הרחיקו את כל חומרי האריזה (שקיות פלסטיק, פוליסטירן וכד'), מהישג ידם של ילדים.

יש לשחרר את כל ברגי האריזה וההובלה לפני השימוש במכשיר. נזק חמור עלול להיגרם אם לא תשחררו אותם. ראו "שחרור ברגי ההובלה".

הוראות בטיחות

בחוברת זו, תראו הערות **אזהרה** ו- **זהירות**. הוראות אזהרה וזהירות אלה, והוראות הבטיחות החשובות אינן מכסות את כל התנאים והמצבים האפשריים שעלולים לקרות. באחריותכם לנהוג בהגיון, זהירות ותשומת לב בעת ההתקנה, התחזוקה והפעלת המכונה. היצרן לא יהיה אחראי לנזקים שנגרמו משימוש לקוי.

הוראות וסימני בטיחות חשובים

פשר האיקונים והסימנים בחוברת זו:

אזהרה	סכנות או פעולות לא בטיחותיות העלולות לגרום **פציעות חמורות או מוות**.
זהירות	סכנות או פעולות לא בטיחותיות העלולות לגרום **חבלות או נזק לרכוש**.
זהירות	להפחתת הסיכון בשריפה, פיצוץ, התחשמלות או פציעה בעת השימוש במכונה, קראו הוראות בטיחות בסיסיות אלה.

	אין לנסות.
	אין לפרק.
	אין לגעת.
	עקבו מפורשות אחר ההנחיות.
	נתקו את התקע מהשקע.
	וודאו שהמכשיר מוארק כדי למנוע התחשמלות.
	התקשרו למחלקת השירות לקבלת סיוע.

סימני אזהרה אלה נועדו למנוע פציעה שלכם ושל אחרים. נא עקבו אחריהם מפורשות. שמרו חוברת זו במקום בטוח לעיון בעתיד.

קראו את כל ההוראות לפני השימוש במכשיר.

כמו בכל ציוד הכולל חשמל וחלקים נעים, קיימות סכנות אפשריות. להפעלה בטוחה של המכשיר, הכירו את פעולתו והפעילו אותו תוך מתן תשומת לב.

התקינו ואחסנו את מכונת הכביסה בפנים, הרחק מחשיפה למזג האוויר.

התקינו ופלסו את המכונה על רצפה שיכולה לתמוך במשקלה.

על המכונה להיות מוארקת כראוי. לעולם אל תחברו אותה לשקע לא מוארק.

תכנית לעדינים וכביסה ביד
ניתן לבצע טיפול מיוחד באמצעות הטמפרטורה המתאימה, פעולת הכביסה העדינה וכמות המים המתאימה.

גוף חימום קרמי לעמידות וחיסכון באנרגיה (בדגמים נבחרים)
גוף החימום הקרמי המתקדם עמיד פי שתיים מגופי חימום רגילים. דבר זה חוסך לכם כסף על תיקונים. בנוסף, הוא מפחית את האבנית שבמים קשים וחוסך באנרגיה.

חיסכון באנרגיה A+AA
קיבלנו את הציון! מכונות הכביסה **WF8804(DP/CP)/WF8704(DP/CP)**, האחרונות בדגמי העלית של 1400 סל"ד, קיבלו ציון **A** משולש: דירוג צריכת אנרגיה **+A**, ציון **A** בביצועי כביסה, וציון **A** בביצועי ייבוש. כתוצאה מכך, אתם מרוויחים יותר זמן פנוי וכסף לבזבז על מה שבאמת חשוב - אתם והמשפחה שלכם.

תצוגה דיגיטלית גרפית
לוח הבקרה הדיגיטלי גרפי הוא ברור וקל לשימוש, לטרחה מינימאלית. בעוד שהיא קלה להפעלה, התצוגה הדיגיטלית הגרפית מאפשרת לכם לבצע כיוונים מהירים ומדויקים, לתוצאות כביסה מעולות.

רענון באמצעות אוורור (בדגמים נבחרים)
רעננו את בגדיכם המועדפים באמצעות אוורור, לאחר שהייתם במסיבה או פשוט בחוץ (מזון, סיגריות). אין צורך לכבס בגדים שאינם מוכתמים, פשוט אווררו אותם. 3 מחזורים שונים זמינים לסוגים שונים של בד.

דלת רחבה
דלת רחבה מאוד לצפייה נוחה! הכניסו והוציאו כביסה בקלות, במיוחד עבור פריטי כביסה גדולים כגון כלי מיטה, מגבות וכד'.

חוברת זו כוללת מידע חשוב אודות ההתקנה, השימוש ותחזוקת מכונת הכביסה החדשה שלכם. עיינו בה לתיאורי לוח הבקרה, הוראות השימוש במכונה וטיפים לניצול תכונותיה העיליות והפונקציות שלה. במקרה תקלה, נא עיינו קודם בסעיף "פתרון בעיות והודעות שגיאה".

מאפייני מכונת הכביסה החדשה שלכם

מכונת הכביסה החדשה שלכם תשנה את הדרך בה הרגשתם כלפי ביצוע כביסה. מקיבולתה הגדולה מאוד ועד ליעילות צריכת האנרגיה שלה, מכונת הכביסה של **Samsung** כוללת את כל התכונות להפיכת משימה יום-יומית לתענוג.

מערכת Baby Care

מכונת הכביסה של **Samsung** כוללת תכניות כביסה המוסיפות הגנה לבגדי ילדים בעלי עור רגיש. תכניות אלה מפחיתות את הגירוי בעור הילדים באמצעות הפחתת משקעי הדטרגנטים. בנוסף, תכניות אלה מסווגות את הכביסה לסוגים שונים ומחזור הכביסה מבוצע בהתאם למאפייני הכביסה, כך שהילדים מרגישים נקיים ורעננים בכל פעם שהם לובשים את בגדיהם.

נעילת ילדים

תכונת נעילת הילדים מבטיחה שידיים קטנות וסקרניות תישמרנה הרחק ממכונת הכביסה שלכם. תכונה בטיחותית זו מונעת מילדיכם מלשחק בהפעלת מכונת הכביסה, ומזהירה אתכם כאשר היא מופעלת.

מאושרת לכביסת צמר

המכונה נבדקה ועברה את ההסמכות הנדרשות מטעם חברת **Woolmark Company** עבור פריטי צמר הניתנים לכביסה במכונה. יש לכבס אריגים בהתאם להוראות המוטבעות בתווית הבגד, כפי שהוגדר ע"י **Woolmark** ו-**Samsung**.

סיום מושהה

השהיית מחזור הכביסה עד 19 שעות במרווחים של שעה וע"י כך מוגדלת נוחות השימוש במכונת הכביסה, במיוחד כאשר עליכם לצאת מהבית.

כביסה מהירה

אין זמן לאבד! כביסה קצרה מ-30 דקות תעניק לכם זמן מספיק לצאת החוצה לפני שמאוחר מדי. תכנית הכביסה המהירה של 29 דקות יכולה להיות הפתרון לחייכם העסוקים. כעת אתם יכולים לכבס את בגדיכם ב-29 דקות בלבד!

הוראות שימוש והפעלה
למכונות כביסה –
דגמים:
WF8800LSS
WF8800LSV
WF8802RPS
WF8802RPV

יבוא ושיווק: **סמ-ליין בע"מ, רח' גרניט 12, ק. אריה פתח תקווה.**
שרות לקוחות: 03-9254833, מוקד מרכזי: 1-800-26-11-26
www.miniline.com/samsung